Qwest®

Spirit of Service™

Qwest® Picture Phone SCP-8100 | User's Guide

SANYO

Qwest and Qwest Wireless are trademarks of Qwest Communications International Inc. Sprint PCS and Sprint PCS Vision are trademarks or service marks of Sprint Communications Company L.P. All other trademarks are property of their respective owners.

Copyright(c) 2004 ACCESS Systems America Inc. ACCESS, NetFront are registered trademarks or trademarks owned by ACCESS Co., Ltd. in Japan and selected countries worldwide. NetFront is a registered trademark of NetFront Communications, Inc. in the United States and is used under a license. Portions of this software are based in part on the work of the Independent JPEG Group.

Powered by JBlend®, ©1997-2004 Aplix Corporation. All rights reserved. Java and all Java-based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. JBlend and all JBlend-based trademarks and logos are trademarks or registered trademarks of Aplix Corporation in Japan and other countries.

Table of Contents

Introduction to this User's Guide i

Section 1: Getting Started 1

1A. Setting Up Service 3

Getting Started 4

Setting Up Your Voicemail 5

Getting Help 5

Section 2: Understanding Your Phone 7

2A. Your Phone: The Basics 9

Front View of Phone 10

Viewing the Display Screen 12

Features of Your Sanyo SCP-8100 13

Turning Your Phone ON and OFF 14

Using the Battery 14

Displaying Your Phone Number 17

Making and Answering Calls 17

Making Calls 17

Answering Calls 18

Changing Ringer Volume 19

Adjusting Volume During a Conversation 19

Muting a Call 19

Missed Call Notification 20

Calling Emergency Numbers 20

Dialing Options 21

In-Call Options 22

End-of-Call Options 23

Saving a Phone Number 24

Finding a Phone Number 25

Dialing and Saving Phone Numbers With Pauses 25

Four-Digit Dialing 26

Dialing From the Internal Phone Book 26

Using One-Touch Speed Dialing 27

2B. Controlling Your Phone's Settings 29

Sound Settings 30

Ringer Types 30

Selecting a Tone Length 32

Setting a Start-up/Power-off Tone 33
Using Voice Prompt 33
Adjusting the Phone's Volume Settings 34
Alert Notification 35
Silence All 36
Display Settings 37
Changing the Greeting 37
Changing the Backlight Time Length 38
Changing the Display Screen 39
Changing the Display for Incoming Calls 40
Changing the Display for Area Name 40
Changing the Display for the Standby Mode 41
Changing the Screen Saver 42
Changing the Display for Mi Amigo 42
Changing the Display Color 43
Changing the Font Size 43
Location Settings 44
Airplane Mode 45
TTY Use 46
Phone Setup Options 47
My Shortcut 47
Auto Answer Mode 47
Setting Call Answer 48
Setting Any Key Answer 48
Setting Abbreviated Dialing 49
Headset Mode 49
Setting Side Key Guard 50
Sleep Mode 50
Setting Message Notification 51
Changing the Menu Language 51
2C. Setting Your Phone's Security 53
Accessing the Security Menu 54
Locking Your Phone 54
Unlocking Your Phone 55
Changing the Lock Code 55
Calling in Lock Mode 55
Restricting Calls 56
Using Special Numbers 57
Erasing the Internal Phone Book 57
Erasing the Downloads 58
Resetting Your Phone 58
Resetting Your Pictures Account 58
2D. Controlling Your Roaming Experience 59
Understanding Roaming 60
Setting Your Phone's Roam Mode 62
Controlling Roaming Charges Using Call Guard 63
2E. Navigating Through Menus 65
Menu Navigation 66
Menu Structure 66
Viewing the Menus 67
2F. Managing Call History 69
Viewing History 70
Call History Options 70
Making a Call From Call History 71
Saving a Phone Number From Call History 71
Prepending a Phone Number From Call History 72
Erasing Call History 73
2G. Using the Internal Phone Book 75
Internal Phone Book Entry Options 76
Entering Text 76
Selecting a Character Input Mode 76
Entering Characters Using T9 Text Input 77
Adding a Word to the T9 Database 77
Entering Characters by Tapping the Keypad 78
Using Smart Punctuation 79
Entering Numbers, Symbols, Canned Suffix and Smileys 79
Adding a New Internal Phone Book Entry 81
Finding Internal Phone Book Entries 82
Adding a Phone Number or Address to an Internal Phone Book Entry 84
Editing an Internal Phone Book Entry 85
Selecting a Ringer/Image Type for an Entry 86

Secret Internal Phone Book Entries 87
Dialing Services 87
Storing Special Numbers in the Phone Book 88
Using Different Dialing Methods 89
My Phone Number 90
2H. Personal Organizer 91
Managing Schedules 92
Adding an Event to the Scheduler 93
Event Alerts 94
Event Alert Menu 94
Editing an Event 95
Adding a Call Alarm to the Scheduler 95
Call Alarm Alerts 96
Call Alarm Menu 96
Editing a Call Alarm 97
Erasing a Day's Events or Call Alarms 97
Going to Today's Scheduler Menu 98
Adding To Do List Items 99
Viewing the To Do List 99
Editing To Do List Items 99
Adding a To Do Item to the Schedule 100
Deleting Items From the To Do List 100
Viewing Event, Call Alarm or To Do List Memory 101
Purging All Events, Call Alarms or To Do List Items 101
Displaying Your Phone Information 102
Displaying User Address 102
Getting to Know Icon Indication 102
Displaying the Version Information 102
Using Your Phone's Tools 103
Using the Calculator 103
Using the World Clock 103
Downloading Files 104
Confirming the Downloaded Data 108
Viewing the Downloaded Data Size 113
2I. Using Your Phone's Voice Services 115
Using Voice-Activated Dialing 116
Programming Voice Dial Tag to Your Phone 116
Erasing All Voice Dial Tags 117
Recording Voice Memos 118
Voice Memo Options 119
Erasing Voice Memos 120
Setting Up Screen Call 121
2J. Using Your Phone's Camera 125
Taking Pictures 126
Creating Your Picture Mail℠ Password 128
Camera Mode Options 129
Sharing Picture Mail 131
Sharing Picture Mail from Review/Share Mode 131
Sharing Picture Mail from Messaging 133
Storing Pictures 133
Review/Share Mode 133
Picture Wallet 135
Managing Picture Mail℠ 137
Using the Picture Mail Website 137
Managing Online Picture Mail From Your Phone 138
Sharing Online Picture Mail 139
Accessing Online Picture Mail Options From Your Phone 140
Setting the Auto Delete Function 141
Section 3: Using Service Features 143
3A. Service Features: The Basics 145
Using Voicemail 146
Setting Up Your Voicemail 146
Voicemail Notification 146
New Voicemail Message Alerts 146
Retrieving Your Voicemail Messages 147
Clearing the Message Icon 147
Using Caller ID 148
Responding to Call Waiting 148
Making a Three-Way Call 149
Using Call Forwarding 150

3B. Sprint PCS Vision℠ 151
Web 152
Launching the Web 152
Net Guard 152
Your User Name 153
Signing In and Out of Sprint PCS Vision℠ Services 154
Browsing the Web 154
Messaging 158
Message Types 158
Messages 158
New Messages 158
Message Storage 158
Displaying Messages 159
Changing the Displaying Font Size of a Message 159
Message Options 160
Prepending a Phone Number From a Message 161
Extracting Phone Numbers From a Message 162
Extracting Email Addresses From a Message 163
Extracting URLs From a Message 163
Creating Folders for Messages 164
Adding a Folder for Messages 165
Moving a Message Into the Other Folder 165
Editing Folders 166
Erasing a Folder Including Messages 166
Erasing All Messages 167
Signing Up for Updates 167
Short Mail 168
Using Short Mail 168
Chat 170
Pictures 171
Downloading Games, Ringers, and Screen Savers 172
Games 174
Ringers 176
Screen Savers 178
Sprint PCS Vision℠ FAQs 180

Section 4: Safety Guidelines 181
4A. Safety 183
Getting the Most Out of Your Reception 184
Maintaining Safe Use of and Access to Your Phone 185
Caring for the Battery 188
Acknowledging Special Precautions and the FCC Notice 189
Owner's Record 192
User's Guide Proprietary Notice 192
Index 193

Introduction to this User's Guide

This User's Guide introduces you to all the features of your new phone. It's divided into four sections:

- **Section 1:** Getting Started
- **Section 2:** Understanding Your Phone
- **Section 3:** Using Service Features
- **Section 4:** Safety and Warranty Information

Throughout the guide, you'll find tips that highlight special shortcuts and timely reminders to help you make the most of your new phone and service. The Table of Contents and Index will help you locate specific information quickly.

You'll get the most out of your phone if you read each section. However, if you'd like to get right to a specific feature, simply turn to that page. Follow the instructions in that section and you'll be ready to use your phone in no time.

Tip: You can print this guide to keep on hand or view it online. If you're viewing it online, simply click on a topic in the Table of Contents or Index on any page reference within a section. The PDF will automatically display the appropriate page.

Getting Started

Setting Up Service

In This Section

- Getting Started
- Setting Up Voicemail
- Getting Help

This section walks you through unlocking your phone, setting up your voicemail, and how to contact Qwest® for assistance.

Getting Started

Unlocking Your Phone

Follow these steps to unlock your phone:

1. Press END/⏻ to turn the phone on.
2. Press Unlock (left softkey).

Note: The left and right softkey buttons are located directly above the 📷 and BACK buttons, respectively, and they correspond with the softkey actions shown on the bottom line of your phone's display screen. Softkey actions change according to the screen you're viewing and will not appear if there is no corresponding action available.

3. Enter your four-digit lock code. For security purposes, the code is not visible as you type.

Tip: If you can't recall your lock code, try using the last four digits of either your Social Security number or your phone number or try 0000. If none of these work, call Qwest Wireless™ Repair at 1-888-879-0611.

Activating Your Phone

To activate your phone, follow the directions included with your phone.

Setting Up Your Voicemail

If you have a wireless voicemail service, all unanswered calls to your phone are automatically transferred to voicemail, even if your phone is in use or turned off. Therefore, you will want to set up your voicemail and personal greeting as soon as your phone is activated.

To set up voicemail:

1. Press and hold ✉1.
2. Follow the system prompts to create your pass code, record your greeting, record your name announcement, and choose whether to activate One-Touch Message Access (a feature that lets you access messages simply by pressing and holding ✉1, bypassing the need for you to enter your pass code).

Note: The voicemail setup process may vary in certain network service areas.

For more information about using your voicemail, see "Using Voicemail" on page 146.

Getting Help

Directory Assistance

Directory Assistance provides a variety of services, including residential, business, and government listings and assistance with local or long-distance calls. There is a per-call charge and you will be billed for airtime.

- Press 4 1 1 TALK.

Operator Services

Operator Services can provide assistance in placing collect calls or calls billed to a local telephone calling card or third party.

- Press 0 TALK.

Note: Operator Services may not be available in all network service markets.

Understanding Your Phone

Your Phone: The Basics

In This Section

- Front View of Phone
- Viewing the Display Screen
- Features of Your Phone
- Turning Your Phone On and Off
- Using the Battery and Charger
- Displaying Your Phone Number
- Making and Answering Calls

Your phone is packed with features that simplify your life and expand your ability to stay connected to the people and information that are important to you. This section will guide you through the basic functions and calling features of your phone.

Front View of Phone

Your Phone's Features

1. **Side Camera Key:** Press to display Camera mode. Lets you mute the ringer when receiving incoming calls.
2. **Volume Keys:** Lets you adjust the receiver volume during a call, or ringer volume in Standby mode. Lets you mute the ringer when receiving incoming calls.
3. **Headset Jack:** Insert the plug of the headset (sold separately) for hands-free listening.
4. **LED (green/red light):** Incoming Call = Green blinks/ Notification (Message, Voicemail, Alerts, etc.) = Red blinks.
5. **Camera Lens:** This built-in camera lens allows you to use auto focus function.
6. **Sub LCD:** Lets you monitor the phone's status and see who's calling without opening the phone.
7. **Main LCD (display):** Displays the phone's main menu, features, modes, etc.
8. **Softkey (left):** Lets you select the menu corresponding to the bottom left line on the Main LCD.
9. **Navigation Key:** Lets you navigate quickly and easily through the menu options. Press ▲ or ▼ on the Navigation key to adjust the receiver volume during a call. It takes a shortcut to the menu by pressing, ►=Phone Book (Find Name), ◄ =My Shortcut, ▲=Share Picture and ▼=Downloads.
10. **MENU/OK:** Lets you see the phone's menus and select menu options.
11. **Camera Key:** Lets you see Pictures menu.
12. **TALK:** Lets you place a call, receive a call, answer Call Waiting, use Three-Way Calling and Voice Dial.
13. **Standard Charger Jack:** Connect the standardized charger (sold separately). Please ask a Qwest representative for this charger.
14. **Accessories Connector:** Connect charging accessories such as a Travel Charger or a Desktop Charger.
15. **Number Keys:** Lets you enter numbers, letters and characters, and navigate within menus. Press and hold 2-9 key to make a Speed Dial call.
16. **END/POWER:** Turns the phone ON and OFF. Lets you disconnect a call while talking or mute the ringer when receiving incoming calls.
17. **BACK:** Allows you to clear characters from the screen, mute the ringer when receiving incoming calls or display Time/Date while the phone is in use.
18. **Softkey (right):** Lets you select the menu corresponding to the bottom right line on the Main LCD.

Viewing the Display Screen

This list identifies the symbols you'll see on your display screen.

- shows your current signal strength. The more lines you have, the stronger your signal.
- means your phone cannot find a signal.
- tells you a call is in progress.
- indicates Sprint PCS Vision℠ access is dormant.
- indicates Sprint PCS Vision℠ access is active.
- indicates Sprint PCS Vision℠ access is disabled.
- indicates you have text messages waiting.
- indicates you have voicemail messages waiting. Press and hold 1 to call your voicemail box.
- indicates you have text messages and voicemail messages waiting.
- indicates you are "roaming" off the network available to you.
- shows the level of your battery charge. The more black you see, the more power you have left. It turns while charging.
- indicates you have menus to scroll (in four directions).
- indicates the vibrate feature is set to ON.
- indicates volume level 4 and vibrate feature is set to ON.
- indicates the Location Service of your phone is enabled.
- indicates the Location Service of your phone is disabled.
- indicates you have new caller's message.
- indicates the Screen Call Auto setting is ON.
- indicates you have new downloaded data.
- indicates self timer is on in Camera mode.
- indicates you set the Color Tone.
- indicates Brightness setting is Manual.
- indicates selected picture has stored in Picture Wallet.
- indicates selected picture has uploaded.
- indicates selected picture has assigned to Screen Saver, Incoming Calls or Phone Book.

Tip: Display indicators let you know when you're off the network available to you and whether you're operating in digital or analog mode.

Features of Your Sanyo SCP-8100

Congratulations on the purchase of your Sanyo SCP-8100. This phone is easy-to-use and reliable. It also offers many significant features and service options:

- Dual band/tri mode capability provides access to other Digital and Analog Networks where the network available to you has implemented roaming agreements (page 60).
- Sprint PCS Vision℠ provides access to the wireless Internet in digital mode (page 151).
- Short Mail (page 168) provides quick and convenient text messaging capabilities.
- Downloadable ringers, screen savers (images), games, and more allow you to turn down time into fun time and to personalize your phone (page 172).
- The built-in scheduler lets you schedule alerts to remind you of important events (page 92).
- Speed Dialing lets you call the phone number stored in the Phone Book by one touch dialing (page 89).
- The internal Phone Book can store up to 300 names, 500 phone numbers, 300 Email addresses, and 300 Web addresses. Each entry can contain 7 phone numbers,1 Email, 1 Web, Ringer, and an Image (page 75).
- The built-in camera allows you to take a picture. You can also send to your friends and family a photo sharing site for storage, upload pictures to a personal Website, or send images to a site for printing (page 125).

Turning Your Phone ON and OFF

Turning Your Phone ON

To turn your phone on, press END/⏻.

Once your phone is ON, it displays "Looking for service..." which indicates that your phone is searching for a signal. When your phone finds a signal, it automatically enters standby mode – the phone's idle state. At this point, you are ready to begin making and receiving calls.

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. When a signal is found, your phone automatically returns to standby mode.

In Power Save mode, your phone searches for a signal periodically without your intervention. You can also initiate a search for service by pressing any key (when your phone is turned ON).

Tip: The Power Save feature helps to conserve your battery power when you are in an area where there is no signal.

Turning Your Phone OFF

Press END/⏻ for two seconds until you see the powering down animation on the display screen.

Your screen remains blank while your phone is off (unless the battery is charging).

Using the Battery

Battery Capacity

Your phone is equipped with a Lithium Ion (LiIon) battery. It allows you to recharge your battery before it is fully drained. The battery provides approximately 2.8 hours of continuous digital talk time (1.4 hours in analog) or approximately 10.7 days of continuous digital standby time (14 hours in analog).

When the battery reaches 5% of its capacity, the battery icon appears. When there are approximately five minutes of talk time left, the phone sounds an audible alert and then powers down.

Note: Long backlight settings, searching for service, vibrate mode, and browser use affect the battery's talk and standby times.

Tip: Be sure to watch your phone's battery level indicator and charge the battery before it runs out of power.

Installing the Battery

To install your phone's LiIon battery:

1. Place the battery into the space beneath the antenna with the metal contacts at the bottom, facing downward.
2. Gently press down until it's in place and the battery release latch snaps.

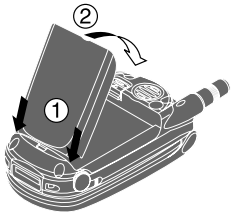

Removing the Battery

To remove your battery:

1. Make sure the power is off so that you don't lose any stored numbers or messages.
2. Push the battery release latch up and hold the battery.
3. Then pull it up and out at a 45-degree angle.

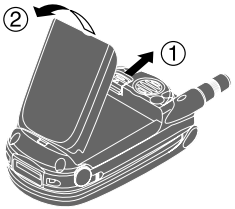

Charging the Battery

Your phone comes with a rechargeable battery. You should charge the battery as soon as possible so you can begin using your phone.

Keeping track of your battery's charge is important. If your battery level becomes too low, your phone automatically turns off and you will lose all the information you were just working on. For a quick check of your phone's battery level, glance at the battery charge indicator located in the upper-right corner of your phone's display screen. If the battery charge is getting too low, the battery icon appears and the phone sounds a warning tone.

Always use an approved desktop charger, travel charger, or vehicle power adapter to charge your battery.

Warning! Using the wrong battery charger could cause damage to your phone and void the warranty.

Using the Travel Charger

To use the travel charger provided with your phone:

1. Plug the travel charger into a wall outlet.
2. Plug the other end of the travel charger into the bottom of your phone (with the battery installed).

- Charging when your phone is turned on:
  The battery icon appears on the display while charging.
  The battery icon turns to when charging is complete.
- Charging when your phone is turned off:
  The battery icon appears, and the message "BATTERY CHARGING-Power Off-" is shown on the display while charging. When the battery is completely discharged, you may wait for several minutes until the message is shown on the display. The battery icon turns to , and message changes to "CHARGING COMPLETE-Power Off-" when charging is complete.

It takes approximately 3.5 hours to fully recharge a completely rundown battery. With the phone's LiIon battery, you can recharge the battery before it becomes completely run down.

Displaying Your Phone Number

Just in case you forget your phone number, your phone can remind you.

To display your phone number:

1. Press MENU OK to access the main menu.
2. Highlight **Phone Info** and press MENU OK.
3. Highlight **Phone# UserID** and press MENU OK.

- User ID also appears on the display if you sign in.

Note: To access the phone's main menu, press MENU OK from standby mode. Menu items may be selected by highlighting them with the Navigation key and pressing MENU OK, or you can press the number corresponding to the menu item on your keypad.

Making and Answering Calls

Making Calls

Your phone offers many different ways to make calls, including Speed Dialing (page 89) and using Call History (page 71).

To make a call using your keypad:

1. Make sure your phone is on.
2. Enter a phone number. (If you make a mistake while dialing, press BACK to erase one digit at a time. Press and hold BACK to erase the entire number.)
3. Press TALK. (To make a call when you are roaming and Call Guard is enabled, press MENU OK, highlight **Roam Call** and press MENU OK. See "Call Guard" on page 63.)
4. When you're finished, press END/⏻.

Tip: To redial your last outgoing call, press TALK twice.

Tip: When making calls off the network available to you, always dial using 11 digits (1 + area code + phone number).

Important: To maximize your phone's performance, extend the antenna fully and do not touch the antenna during a call.

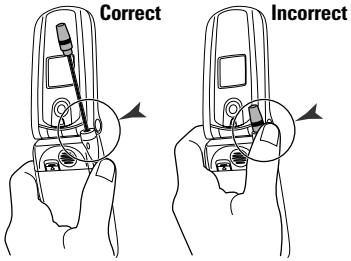

Answering Calls

1. Make sure your phone is on. If your phone is off, incoming calls go to voicemail.
2. When a call comes in, answer the call by pressing TALK. Depending on your settings, your phone notifies you of incoming calls in the following ways:

- The phone rings or vibrates.
- The LED flashes.
- The backlight illuminates.
- The screen displays an incoming call message.
- If available, the phone number of the caller is displayed.
- If the phone number is in your internal Phone Book, the Phone Book entry's name is displayed.

The following options are also displayed by pressing MENU OK. To select an option, highlight it and press MENU OK.

- **Call Guard** to answer the call while you are in roaming. See "Call Guard" on page 63.
- **Answer** to answer the call.
- **Don't Answer** to hang up the incoming call and return to Web while you are in the Web operation. (This feature appears when Sprint PCS Vision℠ access is dormant.)
- **Screen Call** to answer the call by using pre-recorded announcement. (This feature appears when you are in your service area or digital roaming area.) See page 121 for setting up.
- **Quiet Ringer** to mute the ringer. (This feature appears when the ringer is set.)

To answer a call when you are roaming and Call Guard is enabled, you must press MENU OK, highlight **Answer** and press MENU OK to answer the call. See "Call Guard" on page 63.

Note: If your phone is off, incoming calls go to voicemail.

3. To disconnect the call, press END/⏻.

Changing Ringer Volume

To change the ringer volume, adjust the Volume keys when the phone is in Standby mode.

Note: To change the ringer volume from the main menu, see "Adjusting the Phone's Volume Settings" on page 34.

Adjusting Volume During a Conversation

Whether you need to hear more or less of a conversation, adjust the Volume keys or press ▲ or ▼ on the Navigation key during a call.

Muting a Call

There are times when it's necessary to mute a call so that your caller does not hear you or certain background noise.

To use this function during a call:

- Press MENU OK, highlight **Mute** and press MENU OK. When the phone is muted, "**Mute**" appears on the display.

To unmute a call:

- Press MENU OK, highlight **Unmute** and press MENU OK.

Missed Call Notification

When an incoming call is not answered, your phone displays the Missed Call Notification. You can view the number of Missed Calls and the last caller's name on the screen.

To call the last missed call:

- Simply press TALK.

To display the list of Missed Calls:

Press any key except TALK, then press View (left softkey). To make a call from the list, highlight an entry you wish to call and press TALK.

- You cannot return calls to entries listed as No Caller ID.

Note: If the phone is locked, you need to press Unlock (left softkey), then enter the lock code and press View (left softkey).

Calling Emergency Numbers

You can place calls to 911 (dial 9 1 1 and press TALK), even if your phone is locked or your account is restricted. Once the dial is made, you will enter Emergency mode. The phone tries to dial to 911 automatically until the dial will be connected. While you are in the Emergency mode, all phone calls can be received.

To exit from the Emergency mode, follow these instructions:

1. Press END/⏻.
2. Press MENU OK to display the options.
3. Highlight **Exit Emergency** and press MENU OK.

Dialing Options

Dialing options are displayed when you press MENU OK after entering numbers in the Standby mode.

To select an option, highlight it and press MENU OK.

- **Call** to dial the phone number. (If you are roaming and have the Call Guard feature activated, you need to take an extra step. See "Call Guard" on page 63.)
- **Save Phone#** to save the phone number in your internal Phone Book. (See "Saving a Phone Number" on page 24.)
- **H Hard Pause** to insert a hard pause. (See "Dialing and Saving Phone Numbers With Pauses" on page 25.)
- **T 2-Sec. Pause** to insert a 2-second pause. (See "Dialing and Saving Phone Numbers With Pauses" on page 25.)
- **Hyphen** to insert a hyphen manually where you like however, they are mainly for show.

Tip: To Speed Dial a phone number, press and hold the appropriate Speed Dial location from 2-9. See page 89 for setting.

This option appears when you enter 4-digit and press MENU OK.

- **Abbrev. Dial** to dial the phone number in your internal Phone Book that ends with the four digits you enter. (See "Four-Digit Dialing" on page 26.)

This option appears when you enter four or more digits and press MENU OK.

- **Find** to display internal Phone Book entries that ends with the digits you enter. (See "Finding a Phone Number" on page 25.)

In-Call Options

During a call, your phone displays menu options by pressing MENU OK.

To select an option, highlight it and press MENU OK.

- **Flash** to answer an incoming Call Waiting call or connect a third party during Three-Way Calling.
- **Mute** or **Unmute**
  Select **Mute** to mute your phone's microphone. Select **Unmute** to reactivate the microphone.
- **Three-Way Call** to call a third party.
- **Call History** to display your Call History menu. (See "Managing Call History" on page 69.)
- **Phone Book** to display your internal Phone Book. (See "Using the internal Phone Book" on page 75.)
- **Messaging** to display your messaging options. (See "Messaging" on page 158.)
- **Voicemail** to access your voicemail menu. (See page 146.)
- **Settings** to display your phone's Settings menu. (See "Controlling Your Phone's Settings" on page 29.)
- **Calendar** to access your scheduler. (See "Calendar" menu instructions on page 92.)
- **Voice Services** to display your Voice Services options. (See page 115.)
- **Phone Info** to use like a main menu. (See page 102.)

Note: The **Flash** menu appears in Call Waiting and Three-Way Call.
The **Mute** menu does not appear during a 911 call.
The **Three-Way Call** menu does not appear when roaming.

End-of-Call Options

After receiving a call from or making a call to a phone number that is not in your internal Phone Book, the phone number and the duration of the call is displayed. You can display the following menu options by pressing MENU OK within 10 seconds after disconnecting the call.

To select an option, highlight it and press MENU OK.

- **Call Again** to dial the phone number.
- **Save Phone#** to save the phone number in your internal Phone Book. (See "Saving a Phone Number" on page 24.)

After receiving a call from or making a call to a phone number that is in your internal Phone Book, the Phone Book entry name, phone number and the duration of the call are displayed. You can display the following menu options by pressing MENU OK within 10 seconds after disconnecting the call.

To select an option, highlight it and press MENU OK.

- **Call Again** to dial the phone number.
- **Alternate** to save the other phone number into the same entry in your internal Phone Book.

Note: The End-of-Call options are not displayed for calls identified as No ID or Restricted.

Saving a Phone Number

Your phone can store a total of 500 phone numbers in 300 internal Phone Book entries. Each Phone Book entry can store seven phone numbers, and the entry's name can contain 16 characters. Your phone automatically sorts the internal Phone Book entries alphabetically.

To save a number from the standby mode:

1. Enter a phone number.
2. Press MENU OK.
3. Highlight **Save Phone#** and press MENU OK.
4. Select a label by highlighting **Home**, **Work**, **Mobile**, **Pager**, **Data**, **Fax** or **No Label** and press MENU OK.
5. Enter a Name and press MENU OK. (See "Selecting a Character Input Mode" on page 76.) Or you can also save the phone number without a name by pressing MENU OK from the name entry display, highlighting **Yes** and then pressing MENU OK. If you have already stored entries in the Phone Book, you are prompted to select the following entry modes:

- **New Name** to enter a name directly.
- **From Ph. Book** to select a name from Phone Book entry list.

6. Press Save (left softkey).

After you have saved the number, the new internal Phone Book entry is displayed. (See "Internal Phone Book Entry Options" on page 76.)

Finding a Phone Number

You can search internal Phone Book entries for phone numbers that end with the digits you entered.

To find a phone number:

1. Enter four or more digits and press MENU OK. The more numbers you enter, the more specific the search becomes.
2. Highlight **Find** and press MENU OK.
3. The Phone Book entry list that ends with the digits you entered appears.
4. Highlight your desired entry.
   Press MENU OK to display the entry details.
   Press TALK to dial.

Dialing and Saving Phone Numbers With Pauses

You can dial or save phone numbers with pauses for use with automated systems, such as voicemail or credit card billing numbers. If you select a hard pause, the next set of numbers are sent when you press TALK. If you select a 2-second pause, your phone automatically sends the next set of numbers after two seconds.

Note: You can have multiple pauses in a phone number and combine 2-second and hard pauses.

To dial or save phone numbers with pauses:

1. Enter the phone number and press MENU OK.
2. Highlight either **Hard Pause** or **2-Sec. Pause** and press MENU OK. Hard Pauses are displayed as a "H" and 2-second pauses as a "T".
3. Enter additional numbers.
4. Press MENU OK, highlight **Call** to dial the number or **Save Phone#** to save the number in your internal Phone Book and press MENU OK.

When dialing a number with a hard pause, press MENU OK and highlight **Send Tone** and press MENU OK to send the next set of numbers.

Four-Digit Dialing

Enter four digits and press MENU OK to display the 4-Digit Dialing option. If you select **Abbrev. Dial**, your phone dials the phone number in your internal Phone Book that ends with the four digits you entered. See "Setting Abbreviated Dialing" on page 49.

To use 4-Digit Dialing:

1. Dial the last four digits of an internal Phone Book entry's phone number.
2. Press MENU OK to display the menu options.
3. Highlight **Abbrev. Dial** and press MENU OK or TALK.

► You can also start four digits dialing by pressing TALK during step 2 above.

Note: 4-Digit Dialing dials the first number in your internal Phone Book that matches the four digits.

Dialing From the Internal Phone Book

To dial directly from an internal Phone Book entry:

1. Press MENU OK to access the main menu.
2. Highlight **Phone Book** and press MENU OK.
3. Highlight **Find Name** and press MENU OK.

Shortcut: Press the right Navigation key to list entries.

4. Use your Navigation key to scroll through the Phone Book list and highlight one of the appropriate entries and press MENU OK.
5. Highlight the number you wish to call.
6. Press **Options** (right softkey) for the menu options.
7. Highlight **Call** and press MENU OK.

► For more options, see "Internal Phone Book Entry Options" on page 76.

Tip: You can also make a call by pressing **Call** (left softkey) during step 5 above.

Using One-Touch Speed Dialing

With this feature, you can dial Speed Dial entries using one key press for locations 2-9. (See page 89 for storing a Speed Dial number.)

To use One-Touch Dialing for Speed Dial locations 2-9:

► Press and hold the appropriate key for few seconds. The display confirms that the number has been dialed when it shows "Connecting...".

Controlling Your Phone's Settings

In This Section

- Sound Settings
- Display Settings
- Location Settings
- Airplane Mode
- TTY Use
- Phone Setup Options

This section describes how you can change your phone's settings to best suit your needs. Take a few moments to review these options and add or adjust the settings that are right for you.

Reminder: To access the phone's main menu, press MENU OK from standby mode. Menu items may be selected by highlighting them with the Navigation key and pressing MENU OK.

Sound Settings

Ringer Types

Ringer types help you identify incoming calls and messages. You can assign ringer types to individual phone book entries, types of calls, and types of messages.

- **Preprogrammed Ringers** include a variety of standard ringer types and familiar music.
- **Vibrating Ringer** alerts you to calls or messages without disturbing others.
- **Downloaded Ringers** can be downloaded right to your phone. (See "Downloading Ringers " on page 176.)

Selecting Ringer Types for Voice Calls

Your phone provides a variety of ringer options which allow you to customize your ring and volume settings.

To select a ringer type for voice calls so you recognize when a certain type of call is coming in by the ringer:

1. Press MENU OK to access the main menu.
2. Highlight **Settings** and press MENU OK.
3. Highlight **Sounds** and press MENU OK.
4. Highlight **Ringer Type** and press MENU OK.
5. Highlight **Voice Calls** and press MENU OK.
6. Select the menu under **With Caller ID**, **No Caller ID** or **Roaming** and press MENU OK.
7. Highlight your desired ringer type and press MENU OK.
   - **Get New:** start up the Browser and you can select an item to download. (See page 176.)

Selecting Ringer Types for Voicemail

To select a ringer type for voicemail:

1. Press MENU OK to access the main menu.
2. Highlight **Settings** and press MENU OK.
3. Highlight **Sounds** and press MENU OK.
4. Highlight **Ringer Type** and press MENU OK.
5. Highlight **Voicemail** and press MENU OK.
6. Select the menu under **Voicemail** and press MENU OK.
7. Highlight your desired ringer type and press MENU OK.
   - **Get New:** start up the Browser and you can select an item to download. (See page 176.)

Selecting Ringer Types for Messages

To select a ringer type for messages:

1. Press MENU OK to access the main menu.
2. Highlight **Settings** and press MENU OK.
3. Highlight **Sounds** and press MENU OK.
4. Highlight **Ringer Type** and press MENU OK.
5. Highlight **Messaging** and press MENU OK.
6. Select the menu under **Messaging** and press MENU OK.
7. Highlight your desired ringer type and press MENU OK.
   - **Get New:** start up the Browser and you can select an item to download. (See page 176.)

Selecting Ringer Types for Calendar

To select a ringer types for calendar:

1. Press MENU OK to access the main menu.
2. Highlight **Settings** and press MENU OK.
3. Highlight **Sounds** and press MENU OK.
4. Highlight **Ringer Type** and press MENU OK.
5. Highlight **Calendar** and press MENU OK.
6. Select the menu under **Calendar** and press MENU OK.
7. Highlight your desired type and press MENU OK.
   - **Get New:** start up the Browser and you can select an item to download. (See page 176.)

Selecting a Tone Length

Longer tone lengths may be better for tone recognitions when dialing voicemail or other automated systems.

To select a tone length:

1. Press MENU OK to access the main menu.
2. Highlight **Settings** and press MENU OK.
3. Highlight **Sounds** and press MENU OK.
4. Highlight **Others** and press MENU OK.
5. Select the menu under **Tone Length** and press MENU OK.
6. Highlight **Short** or **Long** and press MENU OK.

Setting a Start-up/Power-off Tone

1. Follow the steps 1 to 4 above.
2. Select the menu under **Start-up Tone** or **Power-off Tone** and press MENU OK.
3. Highlight your desired option and press MENU OK.
   - **Get New:** start up the Browser and you can select an item to download. (See page 176.)

Tip: The volume of the Start-up Tone and Power-off Tone can be set through the volume setting. See page 34 for instructions.

Using Voice Prompt

This feature allows you to hear voice prompts at Voice Memo, Screen Call setting or Voice Dial etc. (Default Setting is On).

To deactivate this feature:

1. Press MENU OK to access the main menu.
2. Highlight **Settings** and press MENU OK.
3. Highlight **Sounds** and press MENU OK.
4. Highlight **Others** and press MENU OK.
5. Select the menu under **Voice Prompt** and press MENU OK.
6. Highlight **Off** and press MENU OK.

Tip: When ringer volume is set to "Silence All", voice prompts cannot be heard.

Adjusting the Phone's Volume Settings

To adjust the ringer/key volume:

1. Press MENU OK to access the main menu.
2. Highlight **Settings** and press MENU OK.
3. Highlight **Sounds** and press MENU OK.
4. Highlight **Ringer/Key Vol** and press MENU OK.
5. Select the menu you wish to change and press MENU OK.
   - **Ringer Volume** for adjusting Ringer tone volume.
   - **Start-up/Pw-off** for adjusting Start-up/Power-off tone volume.
   - **Key Beep** for adjusting Key Beep tone volume.
6. Adjust the volume level and press MENU OK.
   - **Ringer Off** to set the Voice Call ringer volume to off. (Only appears in Ringer Volume Setting).
   - **Silence All** to set all the ringer volume to off. (Only appears in Ringer Volume Setting). See "Silence All" on page 36.

To adjust Earpiece volume:

1. Press MENU OK to access the main menu.
2. Highlight **Settings** and press MENU OK.
3. Highlight **Sounds** and press MENU OK.
4. Highlight **Receiver Vol.** and press MENU OK.
5. Adjust the volume level and press MENU OK.

Tip: You can adjust the ringer volume in Standby mode by using Volume keys, and adjust earpiece volume during a call by using ▲/▼ on the Navigation key or Volume keys.

Alert Notification

Your phone comes with several different options to keep you aware of what's going on by sounding the alert or ringer.

- **Service** sets alert On or Off for network services parameter changes.
- **Voicemail** sets alert to notify you of caller's message(s).
- **Messaging** sets alert to notify you of text message(s).
- **Minute Beep** sets a minute reminder that beeps ten seconds before the end of each minute during a call.
- **Signal Fade** sets alert to notify you when your phone loses a signal during a call.

To set the alerts:

1. Press MENU OK to access the main menu.
2. Highlight **Settings** and press MENU OK.
3. Highlight **Sounds** and press MENU OK.
4. Highlight **Alerts** and press MENU OK.
5. Highlight your desired option and press MENU OK.
6. If you selected **Service**, **Minute Beep** or **Signal Fade**, select **On** or **Off**. If you selected **Voicemail** or **Messaging**, select **Once**, **Repeat Alert** or **Off**.

Tip: Repeat Alert sounds every two minutes for twenty minutes.

Silence All

There may be times when you need to silence your phone entirely. The phone's Silence All option allows you to mute all sounds without turning your phone off.

To activate Silence All:

1. Press MENU OK to access the main menu.
2. Highlight **Settings** and press MENU OK.
3. Highlight **Sounds** and press MENU OK.
4. Highlight **Ringer/Key Vol** and press MENU OK.
5. Highlight **Ringer Volume** and press MENU OK.
6. Press ▼ on the Navigation key until "Silence All" appears on the display and press MENU OK.
   - To deactivate this feature, select a volume level you wish during step 6.

Tip: When Ringer Volume is set as Silence All, other items are changed to Off and cannot be highlighted by cursor.

Display Settings

Changing the Greeting

The greeting can be up to 12 characters and is displayed on the first line of your phone's display screen in Standby mode. You may choose to display a custom greeting or you may display your User name on the phone's screen (the default setting).

To display or change your custom greeting:

1. Press MENU OK to access the main menu.
2. Highlight **Settings** and press MENU OK.
3. Highlight **Display** and press MENU OK.
4. Highlight **Greeting** and press MENU OK.
5. Highlight **Custom** and press MENU OK.
   - You can customize the greeting by entering characters (Press BACK to erase a single character, press and hold BACK to erase an entire entry. See "Entering Text" on page 76.)
6. Press MENU OK.

To display your User name as your greeting (the default setting):

1. Follow steps 1 to 4 above.
2. Highlight **Username** and press MENU OK.

Changing the Backlight Time Length

The backlight setting lets you select how long the display screen and keypad are backlit after any key press is made.

To change the Main LCD or Sub LCD backlight setting:

1. Press MENU OK to access the main menu.
2. Highlight **Settings** and press MENU OK.
3. Highlight **Display** and press MENU OK.
4. Highlight **Backlight** and press MENU OK.
5. Highlight **Main LCD** or **Sub LCD** and press MENU OK.
6. Select **Always On**, **Always Off** or your defined time length and press MENU OK.
   - **Always Off** always turns the backlight off.
   - **Always On** always turns the backlight on.

Note: Always On setting returns to previous value on next power cycle.

To change Keypad backlight setting:

1. From step 5, select the menu under **Key** and press MENU OK.
2. Select **Always Off** or your defined time length and press MENU OK.

Note: Long backlight settings affect the battery's talk and standby times.

Changing the Display Screen

Your new phone offers animation for what you see on the display screen when in Standby mode, Outgoing Calls or Service Search.

To change the Animation:

1. Press MENU OK to access the main menu.
2. Highlight **Settings** and press MENU OK.
3. Highlight **Display** and press MENU OK.
4. Highlight **Animation** and press MENU OK.
5. Highlight **Standby**, **Outgoing Calls**, or **Service Search** and press MENU OK.
   - Press **Preview** (right softkey) to see an example display.
6. Select the menu under the item and press MENU OK.
   - For Standby, also set animation starting time. Select the option under **after** and press MENU OK, then highlight your desired setting time and press MENU OK.
   - **Get New:** start up the Browser and you can select an item to download. (See page 178.)
   - To deactivate this feature, select **Off** during step 6.

Changing the Display for Incoming Calls

You can set the color or downloaded image (screen saver) data to be shown on the Incoming Calls display.

Follow these steps:

1. Press MENU OK to access the main menu.
2. Highlight **Settings** and press MENU OK.
3. Highlight **Display** and press MENU OK.
4. Highlight **Incoming Calls** and press MENU OK.
5. Select the menu under **Incoming Calls** and press MENU OK.
6. Highlight your desired color or downloaded image (screen saver) and press MENU OK.
   - **Get New:** start up the Browser and you can select an item to download. (See page 178.)
   - **Pictures:** to set a picture from the Picture Wallet. (See page 135.)
   - To see a display preview, press **Preview** (right softkey) during step 6. Then press **Sub LCD** (right softkey) or close the clamshell to confirm the image on the Sub LCD.
   - To adjust the position of the image, use your Navigation key during step 6.

Changing the Display for Area Name

This feature enables you to show the area of the phone number you are calling to or called by when the number is not registered in Phone Book.

Follow these steps:

1. Press MENU OK to access the main menu.
2. Highlight **Settings** and press MENU OK.
3. Highlight **Display** and press MENU OK.
4. Highlight **Match Area Code** and press MENU OK.
5. Select **On** or **Off** and press MENU OK.
   - This feature is available only when the phone number is 10 or 11 digits that start with 1 and matches area code.

Changing the Display for the Standby Mode

This feature enables you to select a variety of items to display on the Standby mode.

Follow these steps:

1. Press MENU OK to access the main menu.
2. Highlight **Settings** and press MENU OK.
3. Highlight **Display** and press MENU OK.
4. Highlight **Standby Display** and press MENU OK.
5. Select your desired item and press MENU OK.
   - **Screen Saver** selects the screen saver to display.
   - **Calendar** displays the Calendar.
   - **Time (Large)** displays the local time in a large, simple format.
   - **World Clock** displays the time of the selected country along with the local time. You can scroll the World Clock list and change the country by pressing the left or right Navigation key. When applicable, the **Summer** (left softkey)/**Standard** (right softkey) can be used to change between summer and standard time.

Tip: You can also display the World Clock from Tools/Extras menu. See "Using the World Clock" on page 103.

   - **Default** sets this feature to default.
6. After following each system prompt or confirming the preview display, press MENU OK to save the setting.

Tip: In a no-service area, Screen Saver, Calendar, Time (Large), or World Clock cannot be shown on the Standby display.

Changing the Screen Saver

Your new phone offers you the option of displaying a screen saver while in Standby mode.

To assign a screen saver:

1. Press MENU OK to access the main menu.
2. Highlight **Settings** and press MENU OK.
3. Highlight **Display** and press MENU OK.
4. Highlight **Standby Display** and press MENU OK.
5. Select **Screen Saver** and press MENU OK.
6. Select the menu under **Screen Saver** and press MENU OK.
7. Highlight your desired screen saver and press MENU OK.
   - **Get New:** start up the Browser and you can select an item to download. (See page 178.)
   - **Pictures:** to set a picture from the Picture Wallet. (See page 135.)
   - To see a display preview, press **Preview** (right softkey) during step 7. Then press **Sub LCD** (right softkey) or close the clamshell to confirm the image on the Sub LCD.
   - To adjust the position of the image, use your Navigation key during step 7.
8. Press **Save** (left softkey) to save the screen saver.

Changing the Display for Mi Amigo

This feature enables you to see a funny animation for 30 seconds on the Main LCD after opening the flip.

Follow these steps:

1. Press MENU OK to access the main menu.
2. Highlight **Settings** and press MENU OK.
3. Highlight **Display** and press MENU OK.
4. Highlight **Mi Amigo** and press MENU OK.
5. Select **On** or **Off** and press MENU OK.
   - Press **Preview** (right softkey) during step 5 to see a display preview.

Changing the Display Color

To change the display's color scheme:

1. Press MENU OK to access the main menu.
2. Highlight **Settings** and press MENU OK.
3. Highlight **Display** and press MENU OK.
4. Highlight **Color** and press MENU OK.
5. Highlight **Main LCD** or **Sub LCD** and press MENU OK.
6. Select your desired color and press MENU OK.

Changing the Font Size

There are two font size settings for the message notification and browser. To change the font size, follow these steps:

1. Press MENU OK to access the main menu.
2. Highlight **Settings** and press MENU OK.
3. Highlight **Display** and press MENU OK.
4. Highlight **Font Size** and press MENU OK.
5. Highlight either **Notifications** or **Browser** and press MENU OK.
6. Select your desired font size.
   - Press **Preview** (right softkey) to display a font size example.
7. Press MENU OK to set the selected font.

Tip: From the font example display, you can switch the Normal/Small font displays by pressing the Navigation key left or right.

Location Settings

Your phone is equipped with a Location feature which will allow the network to detect your position, making some applications easier to use. Turning Location off will hide your location from everyone except 911.

Note: Even if the Location feature is enabled, no service may use your location without your expressed permission.

To enable your phone's Location feature:

1. Press MENU OK to access the main menu.
2. Highlight **Settings** and press MENU OK.
3. Highlight **Location** and press MENU OK.
4. Press MENU OK or OK (left softkey) or wait a few seconds until the message scrolls down completely.
5. Select **On** and press MENU OK.
   - To deactivate this feature, select **Off** during step 5.

Tip: These icons let you know whether information of your position is sent to the network or not. If you are in a no service or roaming area, the indication is always .
indicates that Location Service is enabled.
indicates that Location Service is disabled.

Airplane Mode

When your phone is in Airplane mode, it cannot send or receive any calls (except for 911 dialing) or access online information. You may still use the phone's other features, such as Voice Memos, Calculator, Calendar, etc., while you are in Airplane mode.

To set your phone to Airplane mode:

1. Press MENU OK to access the main menu.
2. Highlight **Settings** and press MENU OK.
3. Highlight **Airplane Mode** and press MENU OK.
4. The display shows a message. Press MENU OK or OK (left softkey).
   - Press Cancel (right softkey) to return to the setting display.
5. Select **On** and press MENU OK.
   - To deactivate this feature, select **Off** during step 5.

Note: While in Airplane mode, your phone's standby screen will display "Phone Off."

TTY Use

A TTY (also known as a TDD or Text Telephone), is a telecommunications device that allows people who are deaf or hard of hearing, or who have speech or language disabilities, to communicate via a telephone.

Your phone is compatible with selected TTY devices. Please check with the manufacturer of your TTY device to ensure that it supports digital wireless transmission. Your phone and TTY device will connect via a special cable that plugs into your phone's Headset Jack. If this cable was not provided with your TTY device, contact your TTY device manufacturer to purchase the connector cable.

When establishing your service, please call the state Telecommunications Relay Service (TRS) by first dialing 7 1 1 TALK. Then provide the state TRS with this number: 866-727-4889.

To turn TTY mode On or Off:

1. From the Standby mode, press # # 8 8 9 .
2. Press MENU OK.
3. Highlight **Save Phone#** and press MENU OK.
4. Highlight **Accessibility** and press MENU OK.
5. Select **TTY On** or **TTY Off** and press MENU OK.
   - Press Info (right softkey) during step 5 for instructions.

Note: When you connect TTY devices, your phone will display in TTY mode.

Note: If TTY mode is enabled, the audio quality of non-TTY devices connected to the headset jack may be impaired.

IMPORTANT NOTICE: 911 Emergency Calling
It is recommended that TTY users make emergency calls by other means including Telecommunications Relay Services (TRS), analog cellular, and landline communications. Wireless TTY calls to 911 may be corrupted when received by public safety answering points (PSAPs) rendering some communications unintelligible.

Phone Setup Options

My Shortcut

Your phone offers you the option of assigning a shortcut key to a favorite or often-used function. Pressing the left Navigation key in standby mode will launch your user-defined shortcut.

To assign your shortcut menu:

1. Press MENU OK to access the main menu.
2. Highlight **Settings** and press MENU OK.
3. Highlight **Others** and press MENU OK.
4. Highlight **My Shortcut** and press MENU OK.
5. Select the menu under **My Shortcut** and press MENU OK.
6. Highlight your desired menu option and press MENU OK.
   - Press Info (right softkey) during step 5 to see the My Shortcut information.

Auto Answer Mode

This feature sets the phone to automatically pick up after 5 or 15 seconds.

This feature works with the hands-free car kit and headset (sold separately).

To activate this feature:

1. Press MENU OK to access the main menu.
2. Highlight **Settings** and press MENU OK.
3. Highlight **Others** and press MENU OK.
4. Highlight **Auto Answer** and press MENU OK.
5. Select either **5 Seconds** or **15 Seconds** and press MENU OK.
   - To deactivate this feature, select **Off** during step 5.

Setting Call Answer

This feature enables you to answer incoming calls by opening the clamshell so that you don't have to press TALK.

To activate this feature:

1. Press MENU OK to access the main menu.
2. Highlight **Settings** and press MENU OK.
3. Highlight **Others** and press MENU OK.
4. Highlight **Call Answer** and press MENU OK.
5. Select **Open Flip** and press MENU OK.
   - To answer the call by pressing TALK, select **TALK Key** during step 5.

Setting Any Key Answer

This feature allows you to answer incoming calls by pressing any key (except END/⏻, BACK, MENU OK, Side Camera key, Volume keys and Navigation key).

To activate this feature:

1. Press MENU OK to access the main menu.
2. Highlight **Settings** and press MENU OK.
3. Highlight **Others** and press MENU OK.
4. Highlight **Any Key Answer** and press MENU OK.
5. Select **On** and press MENU OK.
   - To deactivate this feature, select **Off** during step 5.

Setting Abbreviated Dialing

Abbreviated Dialing is another form of Speed Dialing. If the last four digits you enter do not match any stored phone book entry, the digits are automatically prepended with the digits specified using the following steps. See "Four-Digit Dialing" on page 26.

To activate this feature:

1. Press MENU OK to access the main menu.
2. Highlight **Settings** and press MENU OK.
3. Highlight **Others** and press MENU OK.
4. Highlight **Abbrev. Dial** and press MENU OK.
5. Highlight **Enable** and press MENU OK.
6. Enter a six-digit number and press MENU OK or OK (left softkey).
   - To deactivate this feature, highlight **Disable** during step 5.

Tip: If you enter less than 6 digits, the display shows a warning message.

Headset Mode

To set Headset mode:

1. Press MENU OK to access the main menu.
2. Highlight **Settings** and press MENU OK.
3. Highlight **Others** and press MENU OK.
4. Highlight **Headset Mode** and press MENU OK.
5. Select **On** and press MENU OK.
   - Press Info (right softkey) during step 5 above to see the Headset mode information.
   - To deactivate this feature, select **Off** during step 5.

Setting Side Key Guard

This feature enables you to lock your side key (Side Camera key and Volume keys) while the clamshell is closed.

To activate this feature:

1. Press MENU OK to access the main menu.
2. Highlight **Settings** and press MENU OK.
3. Highlight **Others** and press MENU OK.
4. Highlight **Side Key Guard** and press MENU OK.
5. Select **On** and press MENU OK.
   - **Side Key Guard** appears on the Sub LCD when you press any side key while the clamshell is closed.
   - To deactivate this feature, select **Off** at step 5.

Note: This feature does **not** apply when the clamshell is open.

Sleep Mode

This feature helps conserve your battery power by restricting the display.

To set sleep mode:

1. Press MENU OK to access the main menu.
2. Highlight **Settings** and press MENU OK.
3. Highlight **Display** and press MENU OK.
4. Highlight **Sleep Mode** and press MENU OK.
5. Highlight **Main LCD** or **Sub LCD** and press MENU OK.
6. Highlight your desired option and press MENU OK.
   - To deactivate this feature, highlight **Off** during step 6.

Setting Message Notification

You can see message notification when you receive a text message or Voicemail while you are using Sprint PCS Vision℠ applications or Browser mode.

1. Press MENU OK to access the main menu.
2. Highlight **Settings** and press MENU OK.
3. Highlight **Messaging** and press MENU OK.
4. Check the box next to **Games/Apps** or **Browser** and press **Save** (left softkey).
   - Press **Info** (right softkey) during step 4 to see the Messages information.

Changing the Menu Language

When you first turn your phone on, the menus are displayed in English.

To change the menu language to Spanish:

1. Press MENU OK to access the main menu.
2. Highlight **Settings** and press MENU OK.
3. Highlight **Others** and press MENU OK.
4. Highlight **Language** and press MENU OK.
5. Select **Español** and press MENU OK.

Setting Your Phone's Security

In This Section

- Accessing the Security Menu
- Locking Your Phone
- Unlocking Your Phone
- Changing the Lock Code
- Calling in Lock Mode
- Restricting Calls
- Using Special Numbers
- Erasing the Internal Phone Book
- Erasing Downloads
- Resetting Your Phone
- Resetting Your Pictures Account

By adjusting the security settings on your phone, you receive peace of mind without sacrificing flexibility. With several options available, you can customize your phone to meet your personal needs.

Accessing the Security Menu

You must enter your lock code to view the Security menu.

To access the Security menu:

1. Press MENU OK to access the main menu.
2. Highlight **Settings** and press MENU OK.
3. Highlight **Security** and press MENU OK.
4. Enter your lock code.

Tip: If you can't recall your lock code, try using the last four digits of either your Social Security number or your phone number or try 0000. If none of these work, call Qwest Wireless™ Repair at 1-888-879-0611.

Locking Your Phone

When your phone is locked, you can only receive incoming calls or make calls to 911 or special numbers.

To lock your phone:

1. From the Security Menu display (See "Accessing the Security Menu" above), highlight **Lock Phone** and press MENU OK.
2. Highlight **Lock Now** or **On Power-up** and press MENU OK.
3. Depending on your preference, highlight either **Full Lock** or **Except Incom.Calls** and press MENU OK.

- **Full Lock:** All phone calls except for Emergency# or Special #s cannot be made. No phone calls can be received except for Special #s.
- **Except Incom.Calls:** All phone calls except for Emergency# or Special #s cannot be made, but all incoming calls can be received.

Tip: If you want to cancel the "On Power-up" setting before turning the phone off, select **Unlocked** during step 2 above.

Unlocking Your Phone

To unlock your phone:

1. Press **Unlock** (left softkey).
2. Enter your lock code.

Changing the Lock Code

To change your lock code:

1. From the Security Menu display (See "Accessing the Security Menu" on page 54), highlight **Others** and press MENU OK.
2. Highlight **Change Lock** and press MENU OK.
3. Enter new lock code, "1234" for example, in the box under **New Code**.
4. Reenter the new code in the box under **Reenter Code**.

Calling in Lock Mode

You can place calls to 911 and to your special numbers when in lock mode.

To place an outgoing call in lock mode:

- To call an emergency number, special number, or Qwest Wireless™ Repair, enter the phone number and press TALK.

Restricting Calls

You can restrict which phone numbers you can dial or receive calls from. (The Restrict Calls setting does not apply to 911 or Qwest Wireless™ Repair.)

To restrict calls:

1. From the Security Menu display (See "Accessing the Security Menu" on page 54), highlight **Others** and press MENU OK.
2. Highlight **Limit Use** and press MENU OK.
3. Select the menu under **Outgoing Calls** or **Incoming Calls** and press MENU OK.
4. Highlight your desired option and press MENU OK.

Options:

- **Allow All:** You can make or receive all calls.
- **Phone Book Only:** Only Phone Book entries, Voicemail or Special #s (see the next page) are available to make or receive calls.
- **Special #s Only:** Only three special numbers' entries are available to make or receive calls.
- To unrestrict all calls, select **Allow All** during step 4 above.

Note: Restricted incoming calls are forwarded to voicemail.

Using Special Numbers

You can save three special numbers in addition to your internal Phone Book entries (the same number may be in both directories). You can make and receive calls from special numbers even when your phone is locked.

To add or replace a special number:

1. From the Security Menu display (See "Accessing the Security Menu" on page 54), highlight **Others** and press MENU OK.
2. Highlight **Special #s** and press MENU OK.
3. Highlight the box under the entry number and press MENU OK.
4. Enter the number you wish to add and press MENU OK.
   – or –
   Press Options (right softkey), then highlight **From Ph. Book** or **Voicemail** and press MENU OK.

To insert pauses into a number:

1. From step 4 above, enter the phone number and press Options (right softkey) for the options.
2. Highlight **Hard Pause**, **2-Sec. Pause**, or **Hyphen** and press MENU OK.
3. Finish entering the rest of the numbers and press MENU OK.

Note: During Speed Dial entry, there are no Speed Dial options associated with special numbers.

Erasing the Internal Phone Book

To erase all the names and phone numbers in your internal Phone Book:

1. From the Security Menu display (See "Accessing the Security Menu" on page 54), highlight **Erase Ph. Book** and press MENU OK.
2. If you're sure you want to erase your Phone Book, highlight **Yes** and press MENU OK.

Erasing the Downloads

To erase all data downloaded from the Web:

1. From the Security Menu display (See "Accessing the Security Menu" on page 54), highlight **Erase D/L** and press MENU OK.
2. If you're sure you want to erase all data downloaded from the Web, highlight **Yes** and press MENU OK.

▶ If you have assigned downloaded data, the function returns to its default setting.

Resetting Your Phone

Resetting the phone restores all the factory defaults, including the ringer types and display settings. The internal Phone Book, Call History, Scheduler, and Messaging are not affected.

To reset your phone:

1. From the Security Menu display (See "Accessing the Security Menu" on page 54), highlight **Reset Phone** and press MENU OK.
2. If you're sure you want to reset your phone, highlight **Yes** and press MENU OK.

Resetting Your Pictures Account

You can use this feature when other people use your phone. With this feature, other people cannot use your account without your password.

To reset your Pictures Account:

1. From the security menu display (See "Accessing the Security Menu" on page 54), highlight **ResetPictures** and press MENU OK.
2. If you're sure you want to reset picture account, highlight **Yes** and press MENU OK.

After resetting, you are prompted to reenter the password when you use Online Pictures.

Note: Your account will be locked if you enter an incorrect password 10 times after resetting your account. If this occurs, please contact Qwest Wireless™ Repair.

Controlling Your Roaming Experience

In This Section

▶ Understanding Roaming
▶ Setting Your Phone's Roam Mode
▶ Controlling Roaming Charges Using Call Guard

Roaming is the ability to make or receive calls when you're off the network available to you. Your new dual band/tri mode phone works anywhere on the network and allows you to roam virtually anywhere in the U.S. where compatible wireless service is available.

This section explains how roaming works as well as special features that let you manage your roaming experience.

Understanding Roaming

Recognizing Icons on the Display Screen

Your phone's display screen always lets you know when you're off the network available to you and whether your phone is operating in analog or digital mode. The following chart indicates what you'll see depending on where you're using your phone.

Main LCD	Roaming Indicator
Your Network	
Other/Analog Networks	R

Sub LCD	Roaming Indicator	Analog Indicator
Your Network		
Other Digital Networks	**Digital Roam**	
Analog Networks		**Analog Roam**

Tip: Remember, when you are using your phone off the network, always dial numbers using 11 digits (1 + area code + number).

Note: You will pay a higher per-minute rate for roaming calls.

Roaming on Digital Networks

When you're roaming on digital networks, your call quality and security will be similar to the quality you receive when making calls on the network available to you. You may not be able to access certain features.

Roaming on Analog Networks

When you roam on analog networks, you will experience a similar quality provided by other analog carriers today. Although some features will be unavailable, you can still make and receive calls and access voicemail. You will experience a few differences:

- You are more likely to experience static, cross-talk, fade-out, and dropped calls.
- Some features which are standard on the network, such as call waiting and direct international dialing, are unavailable.
- Though callers can leave voicemail messages while you are roaming, you may not receive notification until you return to the network available to you. While roaming, you can periodically check your voicemail for new messages by dialing 1+area code+your phone number. Press ✕ when you hear your greeting and enter your pass code at the prompt.
- There are security and privacy risks (eavesdropping and cloning) that exist with conventional analog services today.
- Your battery needs recharging sooner when you use your phone for analog roaming.

Note: If you're on a call when you leave the network available to you and enter an area where roaming is available (whether digital or analog), your call is dropped. If your call is dropped in an area where you think network service is available, turn your phone off and on again to reconnect to the network.

Note: When using your phone in analog mode, the handset may feel warm. This behavior is normal for analog operation.

Setting Your Phone's Roam Mode

Your phone allows you to control your ability to roam. By using the **Roaming** menu option, you can determine which signals your phone accepts.

Set Mode

Choose from three different settings on your dual band/tri mode phone to control your roaming experience:

1. Press MENU OK to access the main menu.
2. Highlight **Settings** and press MENU OK.
3. Highlight **Roaming** and press MENU OK.
4. Highlight **Set Mode** and press MENU OK.
5. To select an option, select it and press MENU OK.

- **Digital:** This setting allows you to access the network available to you only and prevents roaming on other networks.
- **Automatic:** This setting seeks network service. When network service is unavailable, the phone searches for an alternate system.
- **Analog:** This setting forces the phone to seek an analog roaming system. The previous setting (Digital or Automatic) is restored the next time the phone is turned on.

Controlling Roaming Charges Using Call Guard

In addition to the roaming icon, Call Guard alerts you when roaming charges apply. This feature makes it easy to manage your roaming charges by reminding you when you make or receive roaming calls. It also requires you to take an additional step before placing or answering a roaming call. This additional step is not required when you make or receive calls while on the network available to you.

To Turn Call Guard On or Off:

1. Press MENU OK to access the main menu.
2. Highlight **Settings** and press MENU OK.
3. Highlight **Roaming** and press MENU OK.
4. Highlight **Call Guard** and press MENU OK.
5. Select **On** or **Off** and press MENU OK.

To Place Roaming Calls With Call Guard On:

1. From standby mode, dial 1 + area code + the seven-digit number. (You can also initiate a call from the internal Phone Book, Call History, or Messaging.)
2. Press TALK or press MENU OK, highlight **Call** and press MENU OK.
3. A pop-up message will appear notifying you that roaming rate applies. Press 1 to proceed.

– or –

- Press any key to erase the pop-up message, then press MENU OK, highlight **Roam Call** and press MENU OK.

To Answer Incoming Roaming Calls With Call Guard On:

1. Press TALK.
2. A pop-up message will appear notifying you that roaming rate applies. Press 1 to proceed.

– or –

- Press MENU OK, highlight **Answer** and press MENU OK.

Remember if the Call Guard feature is set to **On**, you need to take extra steps to make and receive roaming calls, even if you have selected the **Analog** setting (see page 62).

Navigating Through Menus

In This Section

- Menu Navigation
- Menu Structure
- Viewing the Menus

This section is a road map for using your phone. Every function and feature can be accessed through a menu. Take a few moments to learn your way around, you'll find that it makes your phone easier to use.

Menu Navigation

The Navigation key on your phone allows you to scroll through menus quickly and easily.

To navigate through a menu, simply press the Navigation key up or down.

Menu Structure

Selecting Menu Items

As you navigate through the menu, menu options are highlighted. Select any option by highlighting it and pressing MENU OK.

For example, if you want to view your last incoming call:

1. Press MENU OK to access the main menu.
2. Highlight **Call History** and press MENU OK. (It may already be highlighted.)
3. Press the Navigation key down to highlight **Incoming Calls** and press MENU OK. If you have received any calls, they are displayed on the screen.

Backing Up Within a Menu

To go to the previous menu:

- Press BACK.

To return to standby mode:

- Press END/⏻.

Shortcuts

Left Navigation key (◀) to take a shortcut to the My Shortcut menu. (See page 47 for setting.)

Right Navigation key (▶) to take a shortcut to the Phone Book (Find Name).

Up Navigation key (▲) to take a shortcut to the Share Picture.

Down Navigation key (▼) to take a shortcut to the Downloads.

Viewing the Menus

Menu Diagram

Menus let you check or change your phone settings. The following outline shows your phone's menu structure.

1. Call History
- 1. Outgoing Calls
- 2. Incoming Calls
- 3. Missed Calls
- 4. Erase History

2. Phone Book
- 1. Find Name
- 2. Add New Entry
- 3. My Phone#
- 4. Speed Dial #s
- 5. Services

3. Messaging
- 1. Picture Mail
- 2. Short Mail
- 3. Notifications

4. Pictures
- 1. Camera
- 2. Review/Share
- 3. Picture Wallet
- 4. Online Pics
- 5. Setting

5. Web

6. Downloads
- 1. Games
- 2. Ringers
- 3. Screen Savers
- 4. Applications
- 5. Others

7. Voicemail
1. Call Voicemail
2. Details
3. Clear Count

8. Settings
1. Sounds
2. Display
3. Vision
4. Location
5. Roaming
6. Messaging
7. Security
8. Airplane Mode
9. Others

9. Tools/Extras
1. PC Sync
2. Calculator
3. World Clock

***. Calendar**

0. Voice Service
1. Voice Memo
2. Screen Call
3. Voice Dial

#. Phone Info
1. Phone# UserID
2. Help
3. Version

Managing Call History

In This Section

▶ Viewing History
▶ Call History Options
▶ Making a Call From Call History
▶ Saving a Phone Number From Call History
▶ Erasing Call History

The Call History keeps track of incoming calls, calls made from your phone, and missed calls. This section guides you through accessing and making the most of your Call History.

Viewing History

You'll find the Call History feature very helpful. It is a list of the last 20 phone numbers (or internal Phone Book entries) for each calls that you placed, accepted, or missed. Call History makes redialing a number fast and easy. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

Each entry contains the phone number (if it is available) and internal Phone Book entry name (if the phone number is in your internal Phone Book). Duplicate calls (same number and type of call) may only appear once on the list.

To view a Call History entry:

1. Press MENU OK to access the main menu.
2. Highlight **Call History** and press MENU OK.
3. Highlight **Outgoing Calls**, **Incoming Calls**, or **Missed Calls** and press MENU OK.

Call History Options

For additional information and options on a particular call, highlight a Call History entry and press MENU OK.

This feature gives you the option of selecting:

- **Call** to dial the phone number.
- **Save Phone#** to save the phone number, if it is not in your internal Phone Book (if applicable). If the caller's phone number is already stored in the Phone Book, **Alternate** appears instead of **Save Phone#**. (See "Saving a Phone Number From Call History" on page 71.)
- **Prepend** to add numbers to the beginning of the phone number. (See "Prepending a Phone Number From Call History" on page 72.)
- **View** to view the caller's information.
- **Erase** to erase the entry.

Tip: You can also view the next Call History entry by pressing the right Navigation key or view the previous entry by pressing the left Navigation key.

Making a Call From Call History

To place a call from Call History:

1. Press MENU OK to access the main menu.
2. Highlight **Call History** and press MENU OK.
3. Highlight **Outgoing Calls**, **Incoming Calls**, or **Missed Calls**.
4. Press MENU OK.
5. Highlight the entry you want to call by scrolling through the list.
6. Press TALK.
   – or –
   Press MENU OK, highlight **Call** and press MENU OK.

Note: You cannot make calls from Call History to entries identified as No ID or Restricted.

Saving a Phone Number From Call History

Your phone can store up to 300 internal Phone Book entries. Phone Book entries can store up to a total of 500 phone numbers and each entry's name can contain sixteen characters.

To save a phone number from Call History:

1. Highlight the call history entry you want to save.
2. Press MENU OK to display the options.
3. Highlight **Save Phone#** and press MENU OK.
4. Highlight appropriate label (Home, Work, Mobile, Pager, Data, Fax, or No Label) and press MENU OK.
5. Enter a Name and press MENU OK. You can also save the phone number without a name by pressing MENU OK from the name entry display, highlight **Yes** and then press MENU OK. If you have already stored entries in the Phone Book, you are prompted to select from the following entry modes:

- **New Name** to enter a name directly.
- **From Ph. Book** to select a name from Phone Book entry list.

6. Press Save (left softkey).

After you have saved the number, the new internal Phone Book entry is displayed. (See "Internal Phone Book Entry Options" on page 76.)

Note: You cannot save phone numbers already in your internal Phone Book or from calls identified as No ID or Restricted. If the selected entry has already been stored in the phone book, **Alternate** appears. (See "Saving a Phone Number from Call History" on the previous page.)

Prepending a Phone Number From Call History

If you need to make a call from Call History and you happen to be outside your local area code, you can add the appropriate prefix by following these steps:

1. Highlight a call history entry and press MENU OK.
2. Highlight **Prepend** and press MENU OK.
3. Enter the digits you want to add to the number. If you want to save the number, press MENU OK and select **Save Phone#** from options. If not, the changes only apply to the current call.

To select an option, highlight it and press MENU OK.

- **Call** to dial the phone number.
- **Save Phone#** to store the phone number in your internal Phone Book.
- **H Hard Pause** to insert a hard pause. (See "Dialing and Saving Phone Numbers With Pauses" on page 25.)
- **T 2-Sec. Pause** to insert a 2-second pause. (See "Dialing and Saving Phone Numbers With Pauses" on page 25.)

Erasing Call History

To erase individual Call History entries, see "Call History Options" on page 70.

To erase Call History:

1. Press MENU OK to access the main menu.
2. Highlight **Call History** and press MENU OK.
3. Highlight **Erase History** and press MENU OK.
4. Highlight the category you want to erase and press MENU OK.
5. Highlight **Yes** and press MENU OK.

- You can also select **All Calls** during step 4 above to erase all entries.

Using the Internal Phone Book

In This Section

- Internal Phone Book Entry Options
- Adding a New Internal Phone Book Entry
- Finding Internal Phone Book Entries
- Selecting a Ringer Type
- Dialing Services

Now you know the basics that make it easier to stay in touch with people and information. This section helps you make the most of your contacts and time when you are trying to connect with the important people in your life.

Internal Phone Book Entry Options

To access an internal Phone Book entry's options, display the entry list, highlight an entry and press MENU OK, then select a phone number and press **Options** (right softkey). To select an option, highlight it and press MENU OK.

- **Edit** to edit the entry.
- **Call** to dial the phone number. (If you are roaming and have the Call Guard feature activated, you are required to take an extra step to proceed. See "Controlling Roaming Charges Using Call Guard" on page 63.)
- **Call Alarm** to set the call alarm to the entry (see page 95).
- **Set Speed Dial** to set the Speed Dial to the entry (see page 89).
- **Set Voice Dial** to set the Voice Dial to the entry (see page 116).
- **Prepend** to alter a phone number by adding additional numbers (see page 89).

Tip: You can view the next entry by pressing the right Navigation key or view the previous entry by pressing the left Navigation key.

Entering Text

Selecting a Character Input Mode

Your phone provides convenient ways to enter words, letters, punctuation, and numbers whenever you are prompted to enter text (for example, when adding an internal Phone Book entry).

To change the character input mode:

1. When you display a screen where you can enter text, press the right softkey button.
2. Select a character input mode, highlight it and press MENU OK.

- **T9 Word** to enter characters using T9 Text Input (see page 77).
- **Alphabet** to enter characters by tapping the keypad (see page 78).
- **SYMBOL** to enter symbols (see page 79).
- **NUMBER** to enter numbers (see page 79).
- **CANNED SUFFIX** to enter a canned suffix (see page 80).
- **SMILEYS** to enter smiley pictures (see page 80).

Entering Characters Using T9 Text Input

T9 Text Input lets you enter text in your phone by pressing keys just once per letter. (To select the **T9 Word** mode when entering text, see "Selecting a Character Input Mode" on page 76.)

T9 Text Input analyzes the letters you enter using an intuitive word database and creates a suitable word. (The word may change as you type.) If the word you want does not display after you have entered all the letters, press Next 0 to scroll through additional word selections. To accept a word and insert a space, press Space #.

If you make a mistake, press BACK to erase a single character. Press and hold BACK to delete an entire entry.

Adding a Word to the T9 Database

If a word you want to enter does not display as an option when you are using T9 Text Input, you can add it to the database.

To add a word to the T9 Text Input database:

1. Select the **Alphabet** input mode. (See "Selecting a Character Input Mode" on page 76.)
2. Enter the word using multi-tap text entry. (See "Entering Characters by Tapping the Keypad" on page 78.) Then press right softkey, highlight **T9 Word** and press MENU OK. The word will appear as an option the next time you scroll through options during T9 Text Input.

For more information about T9 Text Input, visit the Tegic Website at www.T9.com.

Entering Characters by Tapping the Keypad

To enter characters by tapping the keypad, select the **Alphabet** mode (see "Selecting a Character Input Mode" on page 76). Press the corresponding key until the desired character appears. By default, the first letter of a word is capitalized and following letters are lowercase.

Characters scroll in the following order:

Key	English Sequence	
	Upper Case	Lower Case
1	. , @ 1 ? ! * # /	
2	A B C 2	a b c 2
3	D E F 3	d e f 3
4	G H I 4	g h i 4
5	J K L 5	j k l 5
6	M N O 6	m n o 6
7	P Q R S 7	p q r s 7
8	T U V 8	t u v 8
9	W X Y Z 9	w x y z 9
Next 0	0	
Space #	Space	
Shift ✕	Unshifted One-character- shifted Caps Lock	

In Spanish mode, characters scroll in the following order.

Key	Spanish Sequence	
	Upper Case	Lower Case
1	. , @ 1 ¿ ? ¡ ! * # /	
2	A Á B C 2	a á b c 2
3	D E É F 3	d e é f 3
4	G H I Í 4	g h i í 4
5	J K L 5	j k l 5
6	M N Ñ O Ó 6	m n ñ o ó 6
7	P Q R S 7	p q r s 7
8	T U Ú Ü V 8	t u ú ü v 8
9	W X Y Z 9	w x y z 9
Next 0	0	
Space #	Space	
Shift ✕	Unshifted One-character- shifted Caps Lock	

See page 51 for changing Spanish entering mode.

After a character is entered, the cursor automatically advances to the next space after two seconds or when you enter a character not on the same key.

Using Smart Punctuation

"Smart punctuation" is available while using in T9 mode. It's a quick and easy way to type email domains, possessive forms and contractions. When you press 1, T9 displays a period.

However, as you continue to type, T9 determines the appropriate mark based on your word database.

For example, to type "It's Easy."

Press 4 8 1 7 Space# 3 2 7 9 1.

Tip: The upper/lower case can be changed by pressing Shift ✕.

Entering Numbers, Symbols, Canned Suffix and Smileys

Entering NUMBERs

To enter numbers, select the **NUMBER** mode and press the appropriate key (see "Selecting a Character Input Mode" on page 76).

1. In a text entry field, press the right softkey.
2. Highlight **NUMBER** and press MENU OK.
3. Press the corresponding numeric key to enter the number.

Shortcut: Press and hold the corresponding numeric key to enter the number directly.

Entering SYMBOLs

To enter symbols, select the **SYMBOL** mode. (See "Selecting a Character Input Mode" on page 76.)

1. In a text entry field, press the right softkey.
2. Highlight **SYMBOL** and press MENU OK.
3. Highlight the line that includes your desired symbol.
4. Press the corresponding key (1~8) with each symbol.
   – or –
   Highlight your desired symbol by using the Navigation key, and press MENU OK.

Entering CANNED SUFFIXes

To enter canned suffix, select the **CANNED SUFFIX** mode. (See "Selecting a Character Input Mode" on page 76.)

1. In a text entry field, press the right softkey.
2. Highlight **CANNED SUFFIX** and press MENU OK.
3. Highlight your desired word by using the Navigation key and press MENU OK.

Entering SMILEYS

To enter smiley pictures, select the **SMILEYS** mode. (See "Selecting a Character Input Mode" on page 76.)

1. In a text entry field, press the right softkey.
2. Highlight **SMILEYS** and press MENU OK.
3. Highlight the line that includes your desired smiley.
4. Press the corresponding key (1~4) with each smiley.
   – or –
   Highlight your desired smiley by using the Navigation key, and press MENU OK.

Adding a New Internal Phone Book Entry

Your phone can store up to 300 internal Phone Book entries. Phone book entries can store up to a total of 500 phone numbers and the entry's name can contain sixteen characters.

To add a new entry:

1. From the Standby mode, enter the phone number you want to save.
2. Press MENU OK to display the menu options.
3. Highlight **Save Phone#** and press MENU OK.
4. Highlight the label you wish to add and press MENU OK.
5. Enter a name, and press MENU OK or OK (left softkey). If you have already stored entries in the Phone Book, you are prompted to select the following entry mode:
   - **New Name** to enter a name directly.
   - **From Ph. Book** to select a name from the Phone Book entry list.
6. Press Save (left softkey).

– or –

1. Press MENU OK to access the main menu.
2. Highlight **Phone Book** and press MENU OK.
3. Highlight **Add New Entry** and press MENU OK.
4. Enter a name and press MENU OK or OK (left softkey).
5. Select the box under your desired label, enter the number or address, and press MENU OK.
6. Press Save (left softkey).

► If you want to store the number without a name, press MENU OK or OK (left softkey) before you enter the name during step 4 above and select **Yes**.

After you have saved the number, the new internal Phone Book entry is displayed. (See "Internal Phone Book Entry Options" on page 76.)

Finding Internal Phone Book Entries

There are several ways to display your internal Phone Book entries. Follow steps outlined in the sections below to display entries from the internal Phone Book menu.

Finding Names

You can review all the entries stored in your internal Phone Book or find an entry quickly by following these simple steps:

1. Press MENU OK to access the main menu.
2. Highlight **Phone Book** and press MENU OK.
3. Highlight **Find Name** and press MENU OK.
4. To select the entry, scroll through the list using your Navigation key.
5. Highlight your desired entry and press MENU OK to locate a specific label.

- Press **Options** (right softkey) for menu options. (See page 76 for options.)

The following softkeys appear when you highlight a number or address during step 5 above:

- **Call** (left softkey) to make a Call.
- **Go** (left softkey) to go to the Website (only Web label).
- **Edit** (right softkey) to edit the phone number or address. (Email and Web label only)

Shortcut: From the Standby mode, press the right Navigation key to display the Find Name feature.

Finding Entries

To find an internal Phone Book entry by entering the first letters:

1. Press ▶ on the Navigation key.
2. Enter the first letter of the name or part of the name using multi-tap method.
3. Highlight your desired entry by scrolling through the phone book entry and press MENU OK.

- If you enter a single letter, the display shows the list beginning with the letter you entered.

– or –

1. From Standby mode, enter four or more digits.
2. Press MENU OK.
3. Highlight **Find** and press MENU OK. (A list of phone book entries that end with the digits you entered displays.)
4. Scroll through the list to select your desired entry.
5. Press TALK to call the selected entry.

Finding Speed Dial Numbers

To find phone numbers you have stored in Speed Dial locations:

1. Press MENU OK to access the main menu.
2. Highlight **Phone Book** and press MENU OK.
3. Highlight **Speed Dial #s** and press MENU OK. (The Speed Dial list displays.)

Finding Voice Dial Numbers

To find phone numbers you have stored in Voice Dial:

1. Press MENU OK to access the main menu.
2. Highlight **Voice Service** and press MENU OK.
3. Highlight **Voice Dial** and press MENU OK.
4. Highlight **Review** and press MENU OK. (The Voice Dial list displays.)

Adding a Phone Number or Address to an Internal Phone Book Entry

To add a phone number or address to an entry:

1. Press MENU OK to access the main menu.
2. Highlight **Phone Book** and press MENU OK.
3. Highlight **Find Name** and press MENU OK.

► Press ▶ on the Navigation key for the shortcut (steps 1 through 3).

4. Highlight the entry you wish to add phone numbers/email/web addresses to and press MENU OK.
5. Highlight a phone number, press **Options** (right softkey), highlight **Edit**, and press MENU OK.
   – or –
   Highlight an Email address or Web address, and press **Edit** (right softkey).
6. Highlight the box under the label you wish to add.
7. Enter the number or address and press MENU OK.
8. Press **Save** (left softkey).

Editing an Internal Phone Book Entry

To make changes to an entry:

1. Display an internal Phone Book entry.
2. Highlight the entry you wish to edit and press MENU OK.
3. Highlight a phone number, press **Options** (right softkey), highlight **Edit**, and press MENU OK.
   – or –
   Highlight an Email address or Web address, and press **Edit** (right softkey).
4. Highlight the box under the following labels and edit by using the Number keys.

- **Name** to change the entry's name. Enter the new name. (See "Entering Characters by Tapping the Keypad" on page 78.)
- **Home** to change the entry's phone number. Enter the new home phone number.
- **Work** to change the entry's phone number. Enter the new work phone number.
- **Mobile** to change the entry's phone number. Enter the new mobile phone number.
- **Pager** to change the entry's pager number. Enter the new pager number.
- **Data** to change the entry's number for data. Enter the new data number.
- **Fax** to change the entry's fax number. Enter the new fax number.
- **No Label** to change the entry's number. Enter the new number.
- **Email** to change the entry's email address. Enter the new email address.
- **Web** to change the entry's Web address. Enter the new Web address.
- **Ringer** to assign a ringer type to the entry. (See "Selecting a Ringer/Image Type for an Entry" on page 86.)
- **Image** to assign an image type to the entry. (See "Selecting a Ringer/Image Type for an Entry" on page 86.)

5. Press **Save** (left softkey).

Tip: You can also store the phone number in the Pager, Data, or Fax category.

Selecting a Ringer/Image Type for an Entry

You can assign a ringer/image type to an internal Phone Book entry so you can identify the caller by the ringer or image type. (See "Ringer Types" on page 30.)

To select a ringer/image type for an entry:

1. Press ▶ on the Navigation key.
2. Select the entry you want to set as the incoming ringer or image and press MENU OK.
3. Press **Options** (right softkey).
4. Highlight **Edit** and press MENU OK.
5. Select the menu under **Ringer** or **Image** by scrolling up or down and press MENU OK.
6. Highlight your desired ringer type or image and press MENU OK.

- **Get New:** start up a Browser and you can select an item to download.
- **Normal: Ringer** equivalent to With Caller ID or Roaming setting (see page 30). **Image** equivalent to Incoming Calls setting (see page 40).
- **None:** the setting equivalent to off.

7. Press **Save** (left softkey).

- To confirm the ringer, highlight **Ringer** and press **Play** (right softkey).
- To see a display preview, press **Preview** (right softkey) during step 7 above, and press **Sub LCD** (right softkey) to see the Sub LCD preview. (You may also check the image through the external display.)
- To adjust the position of the image, use your Navigation key during step 7 above.
- If you set an Animation Ringer (indicated with icon) and an Image, your phone plays the Animation Ringer and displays the selected Image.
- You should have pictures or downloaded data to set Image.

Secret Internal Phone Book Entries

You can hide an entry's phone number(s) by making them secret, which requires your lock code to edit the entry. The entry name is still displayed, but the entry's phone numbers are replaced by "(Secret)".

To make an entry secret:

1. Press ▶ on the Navigation key.
2. Scroll to the internal Phone Book entry you want to tag Secret.
3. Press **Options** (right softkey) to display the menu options.
4. Highlight **Set Secret** and press MENU OK.
5. Enter the 4-digit lock code.
6. Select **On** and press MENU OK.

- To make an entry public, select **Off** during step 6 above.

Tip: If you can't recall your lock code, try using the last four digits of either your Social Security number or your phone number, or try 0000. If none of these work, call Qwest Wireless™ Repair at 1-888-879-0611.

Dialing Services

You must be in digital mode to access these services.

To dial a service:

1. Press MENU OK to access the main menu.
2. Highlight **Phone Book** and press MENU OK.
3. Highlight **Services** and press MENU OK.
4. Highlight **Cust Solutions**, **Dir Assist**, **Account Info**, or **Operator** and press MENU OK.
5. Press TALK.
   – or –
   Press MENU OK, highlight **Call** and press MENU OK.

Storing Special Numbers in the Phone Book

Using the Pause Feature

Generally, when you call an automated system like voicemail boxes or credit card companies, you are required to enter a password or calling card number. Rather than entering the numbers manually each time, you can store the numbers in your internal Phone Book, separated by special characters called "pauses".

Using Two Different Types of Pauses

There are two different types of pauses that you can use when storing a number in your internal Phone Book.

- **Hard Pause** causes the phone to stop dialing until you select **Send Tone** or press TALK. To display **Send Tone**, press MENU OK, highlight **Send Tone** and press MENU OK.
- **2-Sec. Pause** waits two seconds before sending the next string of digits.

To insert pauses into a number:

1. Enter the number you want to dial.
2. Press MENU OK to display the menu options.
3. Highlight:

- **Hard Pause** for a hard pause.
- **2-Sec. Pause** for a timed pause.
- **Hyphen** for a hyphen (see following section).

4. Press MENU OK to insert a pause or manual hyphen.
5. Finish entering the rest of the numbers, then dial or save the entered number. See page 25 for saving.

Using Hyphens

You can add hyphens to your internal Phone Book numbers, however they are mainly for show. You can insert hyphens manually where you like, or choose automatic hyphenation, which inserts hyphens according to the North American Numbering Plan. Entering a manual hyphen suspends any automatic hyphenation for that number.

Using Different Dialing Methods

Prepend Dialing

Prepend dialing allows you to alter a phone number in your Phone Book by adding additional numbers. For example, if your internal Phone Book entry was entered without an area code and you are out of town, you can prepend that entry with the appropriate area code.

1. Highlight the phone number stored in Phone Book entry or call history using one of the previously described methods.
2. Press **Options** (right softkey) to display the menu options.
3. Highlight **Prepend** and press MENU OK.
4. Enter the digits you want to prepend.
5. Press TALK.
   – or –
   Press MENU OK to display the menu options, highlight **Call**, and press MENU OK.

Using Speed Dial

With this feature you can dial internal Phone Book entries with one key press for locations 2-9. Save your memory locations 2-9 for speed dialing or your most commonly used phone numbers. Speed Dial numbers must be stored in your Phone Book to use this feature.

To store a Speed Dial number:

1. Press ▶ on the Navigation key.
2. Highlight your desired entry by scrolling through the phone book list and press MENU OK.
3. Highlight the phone number you want to set as a Speed Dial, and press **Options** (right softkey).
4. Highlight **Set Speed Dial** and press MENU OK.
5. Highlight an unassigned number and press MENU OK.

– or –

1. Press MENU OK to access the main menu.
2. Highlight **Phone Book** and press MENU OK.
3. Highlight **Speed Dial #s** and press MENU OK.
4. To select a corresponding Speed Dial number from 2-9, highlight an unassigned number and press MENU OK.
5. Highlight the entry from the list and press MENU OK.
6. Highlight the phone number you want to set as a Speed Dial and press MENU OK.

To use Speed Dial:

- From the Standby mode, press and hold the appropriate key that corresponds to the memory location for approximately two seconds.
  – or –
  From the Standby mode, press the appropriate key and press TALK.

The display confirms that the number has been dialed when it shows **Connecting**.

My Phone Number

To display your phone number:

1. Press MENU OK to access the main menu.
2. Highlight **Phone Book** and press MENU OK.
3. Highlight **My Phone#** and press MENU OK.

Personal Organizer

In This Section

- Managing Schedules
- Adding an Event to the Schedule
- Event Alerts
- Viewing Events
- Personal Information Management
- Using Your Phone's Tools

Your phone is equipped with several personal information management features that help you manage your busy lifestyle. These features turn your phone into a time management planner that helps you keep up with your contacts, schedules, and commitments. It takes productivity to a whole new level.

Managing Schedules

Calendar

Use the Calendar to remind you of events or important calls you need to make. You can schedule up to 100 events, 15 Call Alarms and 20 To Do Items.

Setting the Time/Date

In a no service area or Analog service area, it's necessary to set actual time before using the Calendar function. Set the current Time/Date by using numeric keys and/or the Navigation key (◄/►: move cursor, ▲/▼: change value). To display the time setting display, press MENU OK, then highlight **Calendar** and press MENU OK.

It's available from 12:00 AM, Jan 1, 2000 to 11:59 PM, Dec 31, 2099.

Setting Holidays

You can set your personal holidays by displaying the date in red on the Calendar display. The default holidays displayed in red are Sundays and National holidays.

You can set holidays from Jan 1, 2000 to Dec 31, 2020.

1. Press MENU OK to access the main menu.
2. Highlight **Calendar** and press MENU OK.
3. Highlight the day you want to set to the holiday by using the Navigation key (◄: previous day, ►: next day, ▲: previous week, ▼: next week).
4. Press **Options** (right softkey).
5. Highlight **Set Date** or **Set Weekly**, and press MENU OK.

Options:

- **Set Date** sets the selected date to the holiday.
- **Set Weekly** sets the weekly holidays.
- **Reset Date** resets the holiday setting for the selected date.
- **Reset Weekly** resets the weekly holiday setting.
- **Reset All** resets all the holiday settings and returns to the default settings.

6. If you selected **Set Weekly**, **Reset Weekly**, or **Reset All**, you'll be prompted to select **Yes** or **No**.

Tip: The current day is framed by a rectangle.

Adding an Event to the Scheduler

Your Scheduler helps organize your time and reminds you of important events.

To add an event:

1. Press MENU OK to access the main menu.
2. Highlight **Calendar** and press MENU OK.
3. Highlight the day you want to add an event by using the Navigation key and press MENU OK.
4. Press **Options** (right softkey) to display the options.
5. Highlight **Add Event** and press MENU OK.
6. Highlight **Sch Event** and press MENU OK.
7. Enter the description and press MENU OK or press MENU OK without entering the description.
8. Select the menu under the following options and press MENU OK:
   - **Description** Enter a description of your event (up to 14 characters).
   - **From** Schedule the start time.
   - **To** Schedule the end time.
   - **Location** Enter the location of your event (up to 14 characters).
   - **Alarm** Select the ringer you wish to set.
   - **Alarm Time** Set the alarm time (number of hours or minutes before the event starts). Default alarm time is 10 minutes.
   - **Repeat** Select the event's repeating status – **None**, **Daily**, **Weekly**, **Monthly**, or **Yearly**.
9. Press **Save** (left softkey) to schedule the event.

Tip: Press the Navigation key up or down to scroll by week through the Scheduler calendar, and the Volume keys to scroll by month.

Event Alerts

There are several ways your phone alerts you of scheduled events:

- By playing the alert tone (depending on the Alert and Ringer Volume setting).
- By blinking the LED.
- By displaying the event's description on the Main LCD when the clamshell is open.
- By displaying the event's description on the Sub LCD when the clamshell is closed.
- By lighting the LCD backlight (depending on the backlight setting).

Event Alert Menu

When your phone is turned on and you have an event alarm scheduled, your phone alerts you and displays the event summary.

1. Press MENU OK or **View** (left softkey) to silence the alarm and see the unchecked event list.
2. Highlight the unchecked event and press MENU OK to see the event details, or press **Options** (right softkey) for following options. To select an option, highlight it and press MENU OK.
   - **Snooze** to repeat the alarm in ten minutes.
   - **Exit** to exit the options.

Note: If you press **Exit** (left softkey) during step 1 above, you are prompted to confirm the unchecked event. Select **Yes** to view or **No** to cancel.

Editing an Event

1. From the Event list display, highlight one of the events and press MENU OK.
2. The event details appear.
3. Select the box under each item you want to edit and press MENU OK. (See "Adding an Event to the Scheduler" on page 93 for options.)
4. Enter or select a new setting and press MENU OK.
5. Press **Save** (left softkey).

Adding a Call Alarm to the Scheduler

To add a Call Alarm from the Scheduler:

1. Press MENU OK to access the main menu.
2. Highlight **Calendar** and press MENU OK.
3. Highlight the day you want to add an event by using the Navigation key and press MENU OK.
4. From the event list display, press **Options** (right softkey) to display the options.
5. Highlight **Add Event** and press MENU OK.
6. Highlight **Call Alarm** and press MENU OK.
7. Enter the phone number directly or press **Options** (right softkey) for the following options:
   - **From Ph. Book** select the number from your phone book entry.
   - **Voicemail** select the number for voicemail access.
8. Select the box under the following items and press MENU OK:
   - **Time/Date** Editing the start time/date.
   - **Alarm** Selecting the ringer alarm.
   - **Repeat** Repeating the Call Alarm. Select **None**, **Daily**, **Weekly**, **Monthly**, or **Yearly**.
9. Press **Save** (left softkey).

Tip: You can also add a Call Alarm from the Phone Book menu (see "Internal Phone Book Entry Options" on page 76).

Call Alarm Alerts

There are several ways your phone alerts you of scheduled call alarms:

- By playing the alert tone (depending on the Alert and Ringer Volume setting).
- By blinking the LED.
- By displaying the name or phone number on the Main LCD when the clamshell is open.
- By displaying the name or phone number on the Sub LCD when the clamshell is closed.
- By lighting the LCD backlight (depending on the backlight setting).

Call Alarm Menu

When your phone is turned on and you have scheduled a call alarm, your phone alerts you and displays the phone number.

1. Press MENU OK or **View** (left softkey) to silence the alarm and see the unchecked event list.
2. Highlight the unchecked call alarm and press MENU OK to see the call alarm details, or press **Options** (right softkey) for following options. To select an option, highlight it and press MENU OK.
   - **Call** to dial the scheduled phone number.
   - **Snooze** to repeat the alarm in ten minutes.
   - **Save Phone#** to save the scheduled phone number, if it is not in your internal Phone Book. If the number is already stored in the Phone Book, **Alternate** appears instead of **Save Phone#**.

Note: If you press **Exit** (left softkey) during step 1 above, you are prompted to confirm the unchecked event. Select **Yes** to view or **No** to cancel.

Editing a Call Alarm

1. From the Event list display, highlight one of the call alarms and press MENU OK.
2. The call alarm details appear.
3. Select the box under each item you want to edit and press MENU OK. (See "Adding a Call Alarm to the Scheduler" on page 95 for options.)
4. Enter or select a new setting and press MENU OK.
5. Press **Save** (left softkey).

Erasing a Day's Events or Call Alarms

To erase a scheduled day's events or call alarms:

1. From the Event list display, highlight one of the events or call alarms and press **Options** (right softkey).
2. Highlight **Erase Event** and press MENU OK.
3. Highlight **Yes** and press MENU OK.

Going to Today's Scheduler Menu

If you are viewing the Scheduler menu and wish to go to the Scheduler menu for today's date:

To view your scheduled events and Call Alarms:

1. Press MENU OK to access the main menu.
2. Highlight **Calendar** and press MENU OK.
3. A "▶" is displayed next to the date if an event or call alarm is scheduled.
4. To view an individual day, highlight the day by using the Navigation key (◀: previous day, ▶: next day, ▲: previous week, ▼: next week) and press MENU OK.
5. To display details, highlight one of the events or call alarms from the list and press MENU OK. The details display appears.

To view a future/past day's scheduled events, follow these steps:

1. From the Event list display, press **Options** (right softkey).
2. Highlight **Go To Date** and press MENU OK.
3. Enter the date by using numeric keys and the Navigation key and press MENU OK or **OK** (left softkey).
4. Press MENU OK again to view the day's Event List.

Adding To Do List Items

Your phone can store and manage 20 To Do items.

To add an entry to your To Do List:

1. From the Event list display, press **Options** (right softkey).
2. Highlight **To Do List** and press MENU OK.
3. Press **Options** (right softkey).
4. Highlight **Add Item** and press MENU OK.
5. Enter the description and press MENU OK (up to 14 characters).
6. Select the menu under **Priority** and press MENU OK to edit the To Do's priority. You can select from **Normal**, **!Urgent**, or **√Done**.
7. Press **Save** (left softkey).

Viewing the To Do List

To view your To Do List:

1. From Event list display, press **Options** (right softkey).
2. Highlight **To Do List** and press MENU OK.

► To see the details of each To Do List item, select an item and press MENU OK.

Editing To Do List Items

To edit your To Do item:

1. From the To Do list display, highlight the item you want to edit and press MENU OK.
2. Edit description or change the priority and press **Save** (left softkey).

Adding a To Do Item to the Schedule

To add your To Do item to the schedule:

1. From the To Do List display, highlight the item you want to add to schedule and press **Options** (right softkey).
2. Highlight **Add To Schedule** and press MENU OK.
3. Enter the description using your keypad and press MENU OK. (See "Adding an Event to the schedule" on page 93 for entering.)
4. Press **Save** (left softkey).

- **Add To Schedule** extracts the item from the To Do list and makes it a scheduled event.

Deleting Items From the To Do List

1. From To Do List display, highlight the item you want to erase and press **Options** (right softkey).
2. Highlight **Erase Item**, **Erase Selection**, or **Erase All** and press MENU OK.
   - **Erase Item** erases an item from the To Do List.
   - **Erase Selection** erases the selected To Do items at one time. Press MENU OK to check the box next to To Do item and press **Erase** (left softkey) to erase. To check all boxes, press **Options** (right softkey) and highlight **Check All** and press MENU OK.
   - **Erase All** erases all the To Do items.
3. Highlight **Yes** and press MENU OK.

Viewing Event, Call Alarm or To Do List Memory

To view their memory space and options:

1. From Event list display, press **Options** (right softkey).
2. Highlight **View Memory** and press MENU OK.
3. Highlight **Sch Event**, **Call Alarm**, or **To Do List** and press MENU OK.

For further options:

4. Press **Options** (right softkey).
5. Highlight an option and press MENU OK.

Options:

- **Erase Old** deletes the old events or call alarms.
- **Erase Selection** deletes the selected To Do item. (See "Deleting Items from the To Do List" on page 100.)
- **Erase Done** deletes the To Do that is done.
- **Erase All** deletes all the events, call alarms, or To Do items.

6. Highlight **Yes** or **No** and press MENU OK.

Purging All Events, Call Alarms or To Do List Items

To delete all scheduled events, call alarms or To Do List items:

1. From Event list display, press **Options** (right softkey).
2. Highlight **Erase Memory** and press MENU OK.
3. Highlight one Options item and press MENU OK.

Options:

- **Erase Old** deletes the old events, call alarms, or completed To Do items.
- **Erase All** deletes all the events, call alarms, or To Do items.

4. Highlight **Yes** or **No** and press MENU OK.

Displaying Your Phone Information

Displaying User Address

To display the current user address you have signed in with:

1. Press MENU OK to access the main menu.
2. Highlight **Phone Info** and press MENU OK.
3. Highlight **Phone# UserID** and press MENU OK.

- If you sign out, "Vision Disabled" appears on the display.
- Your phone number also appears on the display.

Getting to Know Icon Indication

To see the explanation of icons that appear on the display:

1. Press MENU OK to access the main menu.
2. Highlight **Phone Info** and press MENU OK.
3. Highlight **Help** and press MENU OK.
4. Highlight the item for which you want to see the explanation and press MENU OK.
5. The icon's explanation appears and scrolls down automatically.
6. Press **Done** (left softkey) or END/⏻ to end.

- Use ▲/▼ on the Navigation key to scroll the message manually.

Displaying the Version Information

To display the version number of the software, hardware, PRL (Preferred Roaming List), PRI (Product Release Instructions), etc., installed on your phone:

1. Press MENU OK to access the main menu.
2. Highlight **Phone Info** and press MENU OK.
3. Highlight **Version** and press MENU OK.

Using Your Phone's Tools

In addition to features designed to help make you more efficient and organized, your new phone also offers tools for your entertainment and amusement.

Using the Calculator

Your phone comes with a built-in calculator function. To use this feature, follow these easy steps:

1. Press MENU OK to access the main menu.
2. Highlight **Tools/Extras** and press MENU OK.
3. Highlight **Calculator** and press MENU OK.
4. Enter numbers using your keypad. Press **.** (left softkey) to insert a decimal point.
5. Press the appropriate Navigation key for an arithmetic option. (▲ for addition, ▼ for subtraction, ◀ for multiplication, ▶ for division)
6. Enter numbers and press MENU OK for the result.

- To clear the numbers, press **CLR** (right softkey).
- To end calculation, press END/⏻.

Using the World Clock

This feature is available only in digital areas.

1. Press MENU OK to access the main menu.
2. Highlight **Tools/Extras** and press MENU OK.
3. Highlight **World Clock** and press MENU OK.
4. World Clock display appears.

- Press ◀ or ▶ on the Navigation key for changing city or country.

Press **Summer** (left softkey) or **Standard** (right softkey) for changing between summer and standard time, if applicable. "☀" is shown while summer time is displayed.

Downloading Files

Your phone allows you to download images (screen savers), ringers, games, etc., from a Website. It is also possible to download from certain menus (Phone Book, Ringer Setting, or Display Setting).

To download a file from the Web:

1. Press MENU OK to access the main menu.
2. Highlight **Downloads** and press MENU OK.
3. Highlight your desired data folder and press MENU OK.
4. Highlight **Get New** and press MENU OK. (The Browser will launch and display the download page.)
5. Select your desired image or ringer file and follow the system prompts.
6. Press the left softkey to start downloading.
7. Wait for the download to complete.
8. Press END/⏻ to end, or press the left or right softkey for further operation.
   - **Left softkey** runs the downloaded data. (See "Confirming the Downloaded Data" on page 108.)
   - **Right softkey** returns to the download homepage and you can continue to download.

To download a file from a Phone Book entry:

1. Press MENU OK to access the main menu.
2. Highlight **Phone Book** and press MENU OK.
3. Highlight **Find Name** and press MENU OK.
4. Highlight the entry you want to assign the downloaded ringer or image to and press MENU OK.
5. Highlight a phone number and press **Options** (right softkey). Then highlight **Edit** and press MENU OK.
   – or –
   Highlight an Email address or Web address, then press **Edit** (right softkey).
6. Select the menu under **Ringer** or **Image** and press MENU OK.
7. Highlight **Get New** and press MENU OK. (The Browser will launch and display the download page.)
8. Select your desired image or ringer file, and follow the system prompts.
9. Press the left softkey to start downloading.
10. Wait for the download to complete.
11. Press END/⏻ to end, or press the left or right softkey for further operation.
    - **Left softkey** runs the downloaded data. (See "To confirm the downloaded ringers folder" on page 108 or "To confirm the downloaded images (screen savers) folder" on page 109.)
    - **Right softkey** returns to the download homepage and you can continue to download.

To download a ringer file from the Ringer Setting menu (Ringer Type and Start-up/Power-off Tone):

1. Press MENU OK to access the main menu.
2. Highlight **Settings** and press MENU OK.
3. Highlight **Sounds** and press MENU OK.
4. Highlight **Ringer Type** and press MENU OK.
5. Highlight **Voice Calls**, **Voicemail**, **Messaging**, or **Calendar** and press MENU OK. The following item requires an extra step:
   - **Voice Calls** select **With Caller ID** or **No Caller ID**.
6. Select the menu under each item and press MENU OK.
7. Highlight **Get New** and press MENU OK. (The Browser will launch and display the download page.)
8. Select your desired ringer file, and follow the system prompts.
9. Press the left softkey to start downloading.
10. Wait for the download to complete.
11. Press END/⏻ to end, or press the left or right softkey for further operation.
    - **Left softkey** runs the downloaded data. (See "To confirm the downloaded ringers folder" on page 108.)
    - **Right softkey** returns to the download homepage and you can continue to download.

To download a ringer file from the Start-up/Power-off Tone menu:

1. Highlight **Others** at the previous step 4 and press MENU OK.
2. Select the menu under **Start-up Tone** or **Power-off Tone** and press MENU OK.
3. Follow the previous steps from 7 to 11.

To download an image file from the Display Setting menu (Animation, Incoming Calls, and Screen Saver):

1. Press MENU OK to access the main menu.
2. Highlight **Settings** and press MENU OK.
3. Highlight **Display** and press MENU OK.
4. Highlight **Animation** or **Incoming Calls** and press MENU OK. The following item needs an extra step:
   - **Animation** select the menu under **Standby**, **Outgoing Calls**, or **Service Search**.
5. Select the menu under each item and press MENU OK.
6. Highlight **Get New** and press MENU OK. (The Browser will launch and display the download page.)
7. Select your desired image file, and follow the system prompts.
8. Press the left softkey to start downloading.
9. Wait for the download to complete.
10. Press END/⏻ to end, or press the left or right softkey for further operation.
    - **Left softkey** runs the downloaded data. (See "To confirm the downloaded images (screen savers) folder" on page 109.)
    - **Right softkey** returns to the download homepage and you can continue to download.

To download an image file from the Screen Saver menu:

1. Highlight **Standby Display** during step 4 above and press MENU OK.
2. Select **Screen Saver** and press MENU OK.
3. Select the menu under **Screen Saver** and press MENU OK.
4. Follow the previous steps from 6 to 10.

Confirming the Downloaded Data

The downloaded data will be automatically classified as games, ringers, images (screen savers) or an application folder. However, if any data has a different category, it is classified in the Others folder. When you have just finished downloading by pressing the left softkey (see "Options"), you can also confirm the downloaded data, as follows:

To confirm the downloaded games folder:

1. Press MENU OK to access the main menu.
2. Highlight **Downloads** and press MENU OK.
3. Highlight **Games** and press MENU OK.
4. Highlight the downloaded data you want to confirm and press MENU OK.
5. Select **Run** from the options and press MENU OK.

Options

- **Run** to play the downloaded game.
- **Settings** to set the Network Access availability.
- **Options** to select the options of the downloaded data.
  - **Properties** shows the downloaded data property.
  - **Online Info** shows the downloaded data information online.
  - **Shop** allows you to continue downloading.
  - **Logo/Trademark** displays logo and description.
  - **Erase** erases the selected downloaded data.
- **Exit** to return to the downloaded data list display.

To confirm the downloaded ringers folder:

1. Press MENU OK to access the main menu.
2. Highlight **Downloads** and press MENU OK.
3. Highlight **Ringers** and press MENU OK.
4. Highlight the downloaded data you want to confirm and press MENU OK.
5. Select **Play** from the options and press MENU OK.

Options

- **Play** to play the downloaded ringer.
- **Assign** to assign the downloaded data to the Ringer Type, Start-up/Power-off Tone, or Phone Book.
- **Options** to select the options of the downloaded data.
  - **Properties** shows the downloaded data property.
  - **Online Info** shows the downloaded data information online.
  - **Shop** allows you to continue downloading.
  - **Erase** erases the selected downloaded data.
- **Exit** to return to the downloaded data list display.

To confirm the downloaded images (screen savers) folder:

1. Press MENU OK to access the main menu.
2. Highlight **Downloads** and press MENU OK.
3. Highlight **Screen Savers** and press MENU OK.
4. Highlight the downloaded data you want to confirm and press MENU OK.
5. Select **View** from the options and press MENU OK.

Options:

- **View** to display the downloaded image.
- **Assign** to assign the downloaded data to the Incoming Calls, Screen Saver, or Phone Book entry, etc.
- **Options** to select the options of the downloaded data.
  - **Properties** shows the downloaded data property.
  - **Online Info** shows the downloaded data information online.
  - **Shop** allows you to continue downloading.
  - **Erase** erases the selected downloaded data.
- **Exit** to return to the downloaded data list display.

Note: Depending on the data, you can select where to assign Image data: **Incoming Calls**, **Screen Saver** or **Phone Book**. Animation data: **Standby**, **Outgoing Calls** or **Service Search**.

To confirm the downloaded applications folder:

1. Press MENU OK to access the main menu.
2. Highlight **Downloads** and press MENU OK.
3. Highlight **Applications** and press MENU OK.
4. Highlight the downloaded data you want to confirm and press MENU OK.
5. Select **Run** from the options and press MENU OK.

Options:

- **Run** to play the downloaded application.
- **Settings** to set the Network Access availability.
- **Options** to select the options of the downloaded data.
  - **Properties** shows the downloaded data property.
  - **Online Info** shows the downloaded data information online.
  - **Shop** allows you to continue downloading.
  - **Logo/Trademark** displays logo and description.
  - **Erase** erases the selected downloaded data.
- **Exit** to return to the downloaded data list display.

To confirm the downloaded Others folder:

As the downloaded data in the Others folder is varied, the options are subject to change.

1. Press MENU OK to access the main menu.
2. Highlight **Downloads** and press MENU OK.
3. Highlight **Others** and press MENU OK.
4. Highlight the downloaded data you want to confirm and press MENU OK.
5. Select **Open** from the options and press MENU OK.

Options:

- **Open** to play the downloaded content.
- **Options** to select the options of the downloaded data.
  - **Properties** shows the downloaded data property.
  - **Online Info** shows the downloaded data information online.
  - **Shop** allows you to continue downloading.
  - **Erase** erases the selected downloaded data.
- **Exit** to return to the initial display.

Icon Indication

Type	Item	Icon (appears at the left side of the downloaded data)
From Web	Ringers (~64KB)	(New Data) (Assigned Data)
	Voice (~64KB)	(New Data) (Assigned Data)
	Screen Savers/Images (~64KB)	(New Data) (Assigned Data)
	Animation (~64KB)	(New Data) (Assigned Data)
	Animation Ringer (~64KB)	(New Data) (Assigned Data)
	Game (~100KB)	(New Data)
	Application (~100KB)	(New Data)
	Unknown type (~64KB)	(New Data)
		Note: Download icon subject to change

Sorting the downloaded data in memory size order

The files downloaded via Website are stored in alphabetical order. If you want to store the data in memory order, follow these instructions:

1. Press MENU OK to access the main menu.
2. Highlight **Downloads** and press MENU OK.
3. Highlight each folder that includes the downloaded data you want to sort.
4. Press MENU OK.
5. Press **Options** (right softkey).
6. Highlight **Sorting** from the options and press MENU OK.

Options:

- **Sorting** to sort the downloaded data in alphabetical (Name) or memory size (Size) order.
- **Icon/Size** to show the downloaded data list with memory size.
- **Erase All** to erase all downloaded files you selected during step 3. (Downloaded data that has already been assigned cannot be erased.)

7. Highlight **Size** and press MENU OK.

Viewing the Downloaded Data Size

This feature allows you to confirm each downloaded data size and the rest of the download capacity.

To view the data size:

1. Press MENU OK to access the main menu.
2. Highlight **Downloads** and press MENU OK.
3. Highlight each folder that includes the downloaded data you want to confirm and press MENU OK.
4. Press **Options** (right softkey).
5. Highlight **Icon/Size** and press MENU OK.
6. Data size is displayed at the left of the downloaded data name.

- To return the display to the icon indication, repeat steps 4 and 5 above.

Viewing the memory space for downloading

This feature allows you to confirm how much memory is left and used for downloading.

To view the memory space:

1. Press MENU OK to access the main menu.
2. Highlight **Downloads** and press MENU OK.
3. Press **Options** (right softkey).
4. Highlight **View Memory** and press MENU OK.
5. Used and Free memory size are displayed.

Erasing old downloaded data to free space for new data

If you try to download new data when the downloaded data's memory is full, the warning message appears. You will be prompted to erase some old downloaded data.

To get new download data:

1. When the warning message appears, press **Erase** (left softkey) to make a space for new download data. (Press right softkey to cancel the download.)
2. Highlight each folder that includes the data you want to erase.
3. Press MENU OK.
4. Highlight the data you want to erase and press **Erase** (left softkey).
5. Highlight **Yes** and press MENU OK.
6. You can continue to download the new file.

Using Your Phone's Voice Services

In This Section

▶ Using Voice-Activated Dialing

▶ Voice Memos

This section explains the features associated with your phone's Voice Services. The easy-to-follow instructions explain how to use voice-activated dialing and how to record and manage voice memos.

Using Voice-Activated Dialing

With your Sanyo SCP-8100, you can use a Voice Dial tag to automatically dial a phone number in your internal Phone Book. Your phone can store up to 30 Voice Dial tags. (To create a Voice Dial tag, see "Programming Voice Dial Tag to Your Phone" below.)

To use a Voice Dial tag to call a phone number:

1. Press TALK shortly.
2. Follow the voice prompts and recite the entry's Voice Dial tag into your phone's microphone.

Note: Record Voice Dial tags in a quiet environment and without the aid of an accessory (for example, a headset or hands-free car kit).

Programming Voice Dial Tag to Your Phone

To program a Voice Dial tag:

1. Press MENU OK to access the main menu.
2. Highlight **Voice Service** and press MENU OK.
3. Highlight **Voice Dial** and press MENU OK.
4. Highlight **Program** and press MENU OK.
5. The phone will prompt you to say the name you want to program. Wait for the beep and then say the name.
6. Respond to the prompt by repeating the name after the beep.
7. Enter or highlight the entry (name) in the phone book entry list, and press MENU OK.
8. Select the labeled category that includes the phone number (display shows "Voice Dial Recorded").

Reviewing Voice Dialing Tags

1. Press MENU OK to access the main menu.
2. Highlight **Voice Service** and press MENU OK.
3. Highlight **Voice Dial** and press MENU OK.
4. Highlight **Review** and press MENU OK.
5. Highlight the desired entry and press MENU OK.
   – or –
   Highlight the desired entry and press Options (right softkey). Highlight **Play** and press MENU OK.

► Highlight **Erase** during step 5 above, and select **Yes** to erase Voice Dial tag.

Erasing All Voice Dial Tags

To erase all Voice Dial tags:

1. Press MENU OK to access the main menu.
2. Highlight **Voice Service** and press MENU OK.
3. Highlight **Voice Dial** and press MENU OK.
4. Highlight **Erase All** and press MENU OK.
5. Highlight **Yes** and press MENU OK.

Recording Voice Memos

To record a memo in Standby mode:

1. Press MENU OK to access the main menu.
2. Highlight **Voice Service** and press MENU OK.
3. Highlight **Voice Memo** and press MENU OK.
4. Highlight **Record** and press MENU OK.

- Press and hold **Memo** (right softkey) for the shortcut (steps 1 to 4 above).

5. Start recording after the beep.

To end the recording of your memo:

1. Wait for 18 seconds or press MENU OK or BACK while recording.
   – or –
   Press END/⏻ when recording in Standby mode.

To record a conversation during a phone call:

1. Press MENU OK to see the options.
2. Highlight **Voice Service** and press MENU OK.
3. Highlight **Voice Memo** and press MENU OK.
4. Highlight **Record** and press MENU OK.
5. Start recording after the beep.

To end the recording of your conversation:

- Wait for 18 seconds or press MENU OK or BACK while recording.
  – or –
  Press END/⏻ and disconnect the call when recording in Use State.

It also stops recording when the other party hangs up the call.

- Recording Memo is disabled while you are in Analog Service area.
- When the recording capacity is full, highlight an old memo, and press **Options** (right softkey) and select **Erase**, and press MENU OK.

Note: Your phone can store a total of four memos for 18 seconds each.

Voice Memo Options

To play the Voice Memos you have recorded:

1. Press MENU OK to access the main menu.
2. Highlight **Voice Service** and press MENU OK.
3. Highlight **Voice Memo** and press MENU OK.

- Press **Memo** (right softkey) for the shortcut (steps 1 to 3 above).

4. Highlight **Play** and press MENU OK.
5. Highlight one memo from the list.
   – or –
   Highlight **All** if you want to play all memos continuously.
6. Press MENU OK.

- You can change the message playing speed by pressing **Slow** (left softkey) or **Fast** (right softkey).
- To play the newer or older memo, press the Navigation key left or right.
- Wait for ending or press MENU OK to stop playing.
- Highlight **Erase** during step 5 above, and select **Yes** to erase your desired memo.

Tip: Voice Memo is stored with the date and time stamp in reverse chronological order, except when it's recorded in no service area.

Erasing Voice Memos

To erase all Voice Memos:

1. Press MENU OK to access the main menu.
2. Highlight **Voice Service** and press MENU OK.
3. Highlight **Voice Memo** and press MENU OK.

Shortcut: Press **Memo** (right softkey) to access the Voice Memo menu.

4. Highlight **Play** and press MENU OK.
5. Display the memo list, highlight **All** and press **Options** (right softkey).
6. Highlight **Erase All** and press MENU OK.
7. Highlight **Yes** and press MENU OK.

– or –

1. Press MENU OK to access the main menu.
2. Highlight **Voice Service** and press MENU OK.
3. Highlight **Voice Memo** and press MENU OK.

Shortcut: Press **Memo** (right softkey) to access the Voice Memo menu.

4. Highlight **Erase All** and press MENU OK.
5. Highlight **Yes** and press MENU OK.

Note: To erase individual memos, see "Voice Memo Options" on page 119.

Setting Up Screen Call

This feature enables you to answer incoming calls by using pre-recorded announcements, either one that is pre-recorded or one that you record. You can also record the caller's message into the Voice Memo list (See "Recording Voice Memos" on page 118). You can decide whether you answer the call immediately or not during the caller's recording.

Activating Screen Call

To start Screen Call when you have incoming calls:

1. Press MENU OK to display the options.
2. Highlight **Screen Call** and press MENU OK.

To set Auto Screen Call:

1. Press MENU OK to access the main menu.
2. Highlight **Voice Service** and press MENU OK.
3. Highlight **Screen Call** and press MENU OK.
4. Highlight **Auto** and press MENU OK.
5. Highlight **On** and press MENU OK.
   - If you want to change the answer time, enter your desired number (from 1 to 16 seconds) by using numeric keys or the up/down Navigation key.
6. Press MENU OK or **OK** (left softkey). The icon is displayed on the Standby display.

Tip: If a new caller's message is waiting, appears on the display. The memos recorded while activating "Screen Call" are shown with "✓" or "**!**" icon in the list. ("✓": once played, "**!**": not played yet)

Tip: While the caller is recording: Pressing END/⏻ stops recording and disconnects the call. Pressing TALK answers the call.

Selecting an Announcement for Screen Call

1. Press MENU OK to access the main menu.
2. Highlight **Voice Service** and press MENU OK.
3. Highlight **Screen Call** and press MENU OK.
4. Highlight **Announcement** and press MENU OK.
5. Depending on your preference, highlight **Pre-Recorded** or **Custom**, and press MENU OK.

Recording Your Name for a Pre-Recorded Announcement

1. Press MENU OK to access the main menu.
2. Highlight **Voice Service** and press MENU OK.
3. Highlight **Screen Call** and press MENU OK.
4. Highlight **Announcement** and press MENU OK.
5. Highlight **Pre-Recorded** and press **Options** (right softkey).
6. Highlight **Record Name** and press MENU OK.
   - If your name has already been recorded, select **Yes** to overwrite it or **No** to cancel.
7. Press MENU OK to start the 1st recording.
8. After the 1st recording, press MENU OK again to start the 2nd recording.
9. To stop recording, wait for 12 seconds or press MENU OK.

► To erase the recorded name, select **Erase Name** during step 6 above.

► To play the pre-recorded announcement, select **Play** during step 6 above.

Recording a Customized Announcement

1. Follow steps 1 to 4 on the previous page.
2. Highlight **Custom** and press **Options** (right softkey).
3. Highlight **Record** and press MENU OK.
   - If an announcement has already been recorded, select **Yes** to overwrite it or **No** to cancel.
4. Press MENU OK to start the 1st recording.
5. After the 1st recording, press MENU OK again to start the 2nd recording.
6. To stop recording, wait for 12 seconds or press MENU OK.

► To erase the recorded announcement, select **Erase** during step 3 above.

► To play the customized announcement, select **Play** during step 3 above.

Using Your Phone's Camera

In This Section

- Taking Pictures
- Sharing Picture Mail℠
- Storing Pictures
- Managing Picture Mail℠

Your phone gives you the ability to take full-color digital pictures, view your pictures using the phone's display, and instantly share them with your family and friends. It's fun and as easy to use as a traditional point-and-click camera – just take a picture, view it on your phone's display, and send it to up to ten people, right from your phone. Your pictures may also be uploaded to a Picture Mail Website at http://pictures.qwest.com for storage or sent to another Website for your personal use. Picture quality is similar to what you see on your computer screen.

This section explains the features and options of your phone's built-in camera.

Taking Pictures

Taking pictures with your phone's built-in camera is as simple as choosing a subject, pointing the lens, and pressing a key. You can activate Camera mode and take pictures whether the phone is open or closed.

To take a picture with the phone open:

1. Press MENU OK to access the main menu.
2. Highlight **Pictures** and press MENU OK to access the Pictures menu.
3. Highlight **Camera** and press MENU OK to activate Camera mode. (Additional user options are available through the Camera mode **Options** menu. See "Camera Mode Options" on page 129 for more information.)

Shortcut: To activate Camera mode in another way, press and hold , press twice, or just press the Side Camera key (see diagram on page 10).

4. Using the phone's Main LCD as a viewfinder, aim the camera lens at your subject.
5. Hold the camera steady. To take the picture, press MENU OK, or the Side Camera key.
6. Press **Keep** (left softkey) to save the picture. Press **Discard** (right softkey) to erase the picture and return to Camera mode.

- Once you have kept/saved a picture, you will be in Review/Share mode. You will now be able to share or upload the picture.
- To return to Camera mode to take another picture, press .

To take a picture with the phone closed:

1. Press and hold the Side Camera key to activate Camera mode.
2. Point the camera lens at your subject. You can check the picture framing through the Sub LCD.

Note: When taking a picture with the phone closed, the subject image appears in reverse on the Sub LCD. When you take a picture, it will be saved correctly, that is, not reversed.

3. Press the Side Camera key to take the picture.
4. Press the Side Camera key to save the picture.

Note: The picture will be saved automatically after 30 seconds.

Note: While you are taking a picture, the backlight turns on even if your backlight is set to **Always Off**.

Note: In some cases, the screen may flicker and the stripes may appear on the display under fluorescent lighting.

Creating Your Picture Mail℠ Password

The first time you use any of the picture management options involving the Picture Mail Website you will need to establish a Picture Mail password through your phone. This password will also allow you to sign in to the Picture Mail Website at http://pictures.qwest.com to access and manage your uploaded pictures.

To create your Picture Mail password:

1. Press MENU OK to access the main menu.
2. Highlight **Pictures** and press MENU OK.
3. Highlight **Review/Share** and press MENU OK.

Shortcut: Instead of steps 3 above, highlight **Camera** and press MENU OK. Then press **Review** (left softkey) to enter Review/Share mode.

4. Press **Options** (right softkey), highlight **Upload**, and press MENU OK.
5. Highlight **Upload This** or **Upload All** and press MENU OK. You will be prompted to create a Picture Mail password.

Note: To access Picture Mail Website in another way, highlight **Online Pics** and press MENU OK from step 3 above.

6. Enter a 4-digit, alpha-numeric password and press MENU OK.

Tip: Write down your Picture Mail password in a secure place.

7. Please wait while the system creates your account.

Once you have received confirmation that your account has been successfully registered you may upload and share pictures and access the Picture Mail Website.

Camera Mode Options

When the phone is open and in Camera mode, several user options are available.

- **Review:** Press **Review** (left softkey) to enter Review/Share mode. From there you can view the captured pictures, view a running count of stored pictures, and more. (See "Review/Share Mode" on page 133.)

Pressing **Options** (right softkey) displays additional user options:

- **Self-timer:** Activate the camera's timer function. (See "Setting the Self-timer" on page 130 for details.)
- **Fun Frames:** Select your favorite fun picture frame to decorate your picture and press MENU OK.
- **Color Tone:** Select **Normal**, **Sepia**, **Black & White** or **Negative**. (Default setting is **Normal**.)
- **Brightness:** Select **Auto** or **Manual** brightness control. If you select **Manual**, press the Navigation key right (Higher) or left (Lower) to select a setting and press MENU OK or **OK** (left softkey) to apply the desired setting. (Default setting is **Auto**.)
- **Shutter Sound:** Select **Default**, **Say "Cheez"** or **Off**. If your phone's ringer is set to **Silence All**, Shutter Sound is set to **Off**. (Default setting is **Default**.)

Tip: You can also select fun frames from Camera mode by using the left/right Navigation key.

Note: After taking a picture, **Self-timer** and **Fun Frames** settings return to their default settings.

Note: Press the up or down Navigation key to display a picture count at the bottom of the Main LCD. On the same line of the LCD display, appears if you set a **Color Tone** and appears if you set a **Brightness**.

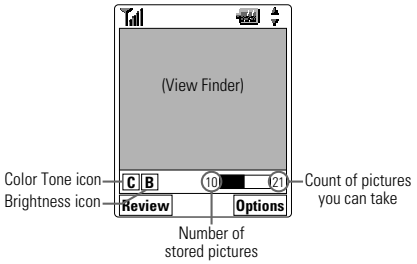

Setting the Self-timer

To activate the Self-timer and get yourself in on the picture:

1. With the phone open and in Camera mode, press **Options** (right softkey).
2. Highlight **Self-timer** and press MENU OK.
3. Highlight the length of delay you want the timer to use (**10 seconds** or **5 seconds**) and press MENU OK. To deactivate the Self-timer, highlight **Off** and press MENU OK.
4. Press **Start** (left softkey) when you are ready to start the timer. and a numeric countdown appear on the lower left portion of the Main LCD during the Self-timer countdown.
5. Get ready for the picture. When the timer is down to three seconds, the Self-timer icon will turn red and the phone will begin to beep.

- To cancel the Self-timer after it has started, press **Cancel** (right softkey).

Note: While the Self-timer is active, all keys are disabled except BACK, END/⏻ or **Cancel** (right softkey).

Tip: To view a brief summary of Camera, Review/Share, and Picture Wallet use, press **Info** (right softkey) from the Pictures main menu.

Sharing Picture Mail

Once you've taken a picture, you can use the messaging capabilities of your phone to instantly share it with family and friends. You can send a picture to up to ten people at a time using their email addresses or their Sprint PCS Vision℠-capable wireless phone numbers. (You can also share Picture Mail from your phone through your online Picture Mail account. See "Sharing Online Picture Mail" on page 139 for details.)

Sharing Picture Mail from Review/Share Mode

1. From standby mode, press MENU OK to access the main menu.
2. Highlight **Pictures** and press MENU OK to display the Pictures menu.

Shortcut: Instead of steps 1 and 2 above, press .

3. Highlight **Review/Share** to enter Review/Share mode.
4. From Review/Share mode, use the left/right Navigation key to select the picture you'd like to send and press **Share** (left softkey). Your contact list (phone book) will display.

Note: The first time you share Picture Mail, you will be prompted to establish a Picture Mail Website account and password. See "Creating Your Picture Mail Password" on page 128 for information.

5. Use the Navigation key to select a recipient and press MENU OK to add the selected recipient to the Picture Mail. This will check the box next to the recipient's name.

Note: If there are no entries in your contact list (phone book), a blank New Entry form will display. Follow the instructions below to add a new entry.

– or –

To add someone not already in your contact list/internal phone book, select **<New Entry>** and press MENU OK. Enter the recipient's Sprint PCS Vision℠-enabled phone number and/or email address and a name for the entry. Press **Save** (left softkey) to save the entry. The new recipient will be added to the Picture Mail and to your internal phone book.

- To edit an entry, press **Edit** (right softkey) when selected. Edit the entry's phone number, email address, or name and press **Save** (left softkey) to save the entry.

Note: The [M] and [@] icons next to contact's names represent Mobile Phone and email. When entering a new contact, use the left/right Navigation key to toggle to the correct icon for the entry.

Note: Only the email address OR the phone number may be selected for a recipient. To change the default once the new entry has been added, use the Navigation key and scroll right to select either [M] (Sprint PCS Vision℠-enabled phone number) or [@] (email address).

6. Press [Done] (left softkey) when you are finished selecting/entering recipients (you may include up to 10 recipients per Picture Mail).
7. To record and include a Voice Memo with the picture you are sending, highlight **Include**, press MENU OK, and start recording after the beep. (Maximum recording time is 10 seconds.) Press MENU OK to end the recording.
   – or –
   If you do not wish to attach a Voice Memo to the Picture Mail, highlight **Don't Include** and press MENU OK.
8. Use your keypad to enter a text message (or press the right softkey to select from **Canned Messages** or **Recent Messages**) and press MENU OK. (You may also choose to leave the message area blank; just press MENU OK to continue.)
9. Confirm the recipients, message, voice memo, and picture.

- To change a recipient, highlight the recipient, press [Change] (right softkey), and follow the instructions in step 5 above to select a recipient or to edit the selected recipient.
- To change or confirm other items, highlight the box beneath Message and press [Options] (right softkey) to display options:

  Message Change to enter or change the text message.

  VoiceMemo Play to play the attached Voice Memo (if applicable).

  VoiceMemo Rec to record or re-record the Voice Memo.

  VoiceMemo Erase to delete the Voice Memo from the Picture Mail (if applicable).

10. Press [Send] (left softkey) to send the Picture Mail.

Sharing Picture Mail from Messaging

You can also share your pictures from your phone's Messaging menu.

1. Press MENU OK to access the main menu.
2. Highlight **Messaging** and press MENU OK.
3. Highlight **Share Picture** and press MENU OK. (The most recent picture saved to Review/Share mode displays.)

Shortcut: Press the up Navigation key to enter the Picture Mail Review/Share menu.

4. Use the left/right Navigation key to select the picture you wish to send and press [Select] (left softkey).

Tip: To display thumbnail pictures, press [Options] (right softkey), highlight **Thumbnail**, and press MENU OK.

5. To complete and send the Picture Mail, follow steps 5-10 in "Sharing Picture Mail from Review/Share Mode" on page 131.

Storing Pictures

Your phone can store pictures in two ways:

- **Review/Share Mode** (see below)
- **Picture Wallet** (see page 135)

Review/Share Mode

Your phone can store approximately 11 pictures in Review/Share mode, depending on available memory.

When a picture is taken and kept, it is saved to Review/Share mode. You can enter Review/Share mode from the Pictures menu by selecting **Review/Share**. You may also enter Review/Share mode from Camera mode by pressing [Review] (left softkey). (When you take a picture and press [Keep] (left softkey), your phone automatically enters Review/Share mode.)
In Review/Share mode, you can view all the pictures you have kept, store selected images in your phone, send pictures to the Picture Mail Website, delete pictures and access additional picture options.

Press **Options** (right softkey) to display the following options:

- **Camera** to switch to Camera mode.
- **Save to Wallet** to save a picture to the Picture Wallet. (See "Picture Wallet" on page 135.)
- **Upload** to select **Upload This** or **Upload All** to upload a single picture or all pictures saved in Review/Share mode to the Picture Mail Website. Depending on your settings, you may be prompted to accept a Sprint PCS Vision℠ connection.

Note: Pictures which have been saved to your wallet will remain available in Review/Share mode until you erase them.

Note: If this is the first time you have accessed the Picture Mail account, you will be prompted to create your Picture Mail password. See "Creating Your Picture Mail Password" on page 128.

- **Erase** to select **Erase This** or **Erase All** to erase a single picture or all pictures saved in Review/Share mode.

Note: Erasing pictures will free up memory space in your phone to enable you to take more pictures. Once erased, pictures cannot be uploaded to your online Picture Mail account or saved to the Picture Wallet.

- **Color Tone** to select a color tone (**Sepia**, **Black & White**, or **Negative**) for the picture.

Note: Once you have changed a picture's color tone, it cannot be returned to its original tone.

- **Edit Caption** to edit the picture's caption. (Up to 14 characters. See "Entering Text" on page 76.)
- **Picture Info** to display information on the selected picture, such as caption, time/date, size, etc.
- **Thumbnail** to switch the display from full-screen to thumbnail view (up to four pictures per screen). (If the display is already in Thumbnail view, the option will appear as **Expand** to switch from thumbnail to full-screen view.)

Tip: Press the up or down Navigation key to view a picture's caption and number/count (for example 1/14 is the first of 14 stored pictures) at the bottom of the display screen. The Save to Wallet and Uploaded icons also appear, if applicable.

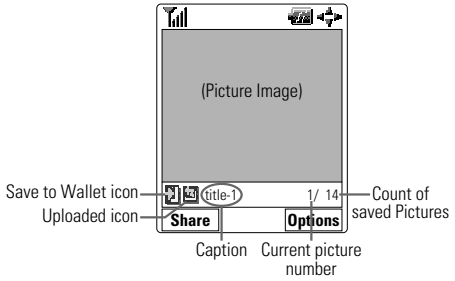

Picture Wallet

Your Phone can store up to 60 pictures in the Picture Wallet, depending on available memory.

To save a picture to the Picture Wallet:

1. From Review/Share mode (see "Review/Share Mode" on page 133), use the left/right Navigation key to select a picture you wish to save the Picture Wallet.
2. Press **Options** (right softkey). The Review/Share mode options will display.
3. Highlight **Save to Wallet** and press MENU OK. A copy of the picture will be saved to the Picture Wallet.

To view pictures stored in the Picture Wallet:

1. Press MENU OK to access the main menu.
2. Highlight **Pictures** and press MENU OK.
3. Highlight **Picture Wallet** and press MENU OK.
4. Press **Thumbnail** (left softkey). Thumbnail pictures will display (up to four pictures per screen).
5. Using the Navigation key, select a desired picture.
6. To expand the selected picture, press MENU OK or **Expand** (left softkey).
7. Press **Options** (right softkey) to display a list of options for the selected picture. To select an option, highlight it and press MENU OK.

- **Incoming Calls** to display the selected picture for all incoming calls.
- **Screen Saver** to display the picture as an LCD screen saver.
- **Phone Book** to display the picture for incoming calls from a specific internal phone book entry.
- **Erase** select **Erase This** or **Erase All** to erase the selected picture or all pictures saved in the Picture Wallet.

Note: Pictures may be assigned to more than one task.

Note: Press the up/down Navigation key to view a picture's file name and picture count at the bottom of the display screen. The Assigned A icon also appears, if applicable.

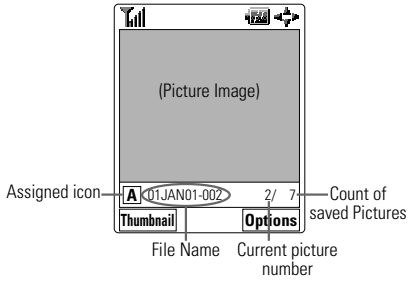

Managing Picture Mail℠

Using the Picture Mail Website

Once you have uploaded pictures from your phone to your online Picture Mail account (see "Review/Share Mode" on page 133), you can use your personal computer to manage your pictures. From the Picture Mail Website you can share pictures, edit album titles and picture captions, organize and move images, and do much more.

You will also have access to picture management tools to improve and customize your pictures. You'll be able to lighten, darken, crop, antique, add comic bubbles and cartoon effects, and use other features to transform your pictures.

To access the Picture Mail Website:

1. From your computer's Internet connection, go to http://pictures.qwest.com.
2. Enter your phone number and Picture Mail password to register. (See "Creating Your Picture Mail Password" on page 128.)

Managing Online Picture Mail From Your Phone

You can use your phone to manage, edit, or share pictures you have uploaded to the Picture Mail Website. (See "Review/Share Mode" on page 133 for information about uploading.)

To view your online Picture Mail from your Phone:

1. Press MENU OK to access the main menu.
2. Highlight **Pictures** and press MENU OK.
3. Highlight **Online Pics** and press MENU OK. Depending on your settings, you may be prompted to accept a Sprint PCS Vision℠ connection.
4. Your Picture Mail InBox and your albums appear. Highlight **InBox** or an album title and press MENU OK to display.
5. Thumbnail pictures appear (up to four per screen). Use your Navigation key to select a picture.

Tip: To expand a selected picture from thumbnail to full-screen, highlight it and press **Expand** (left softkey) or MENU OK.

Sharing Online Picture Mail

1. From the online Picture Mail InBox, select a picture you wish to share and press **Share** (left softkey).
2. Highlight **Phone Book** or **Online Addr. Book** and press MENU OK.
3. Select a recipient from your internal Phone Book or Online Address Book, and press MENU OK.

Options (Online Address Book only)

- **Next** to display the next 50 entries (if applicable).
- **Previous** to display the previous 50 entries (if applicable).
- **Exit** to exit the options menu.

4. To complete and send the Picture Mail, follow steps 5-10 in "Sharing Picture Mail from Review/Share Mode" on page 131.

To share an album from online mode:

1. From the online Albums display, use the Navigation key to select an album you wish to share and press **Share** (left softkey).
2. Follow steps 2-4 in "Sharing Online Picture Mail" to complete and send your Picture Mail.

- You cannot attach Voice Memo when you share an album.

Accessing Online Picture Mail Options From Your Phone

1. Select a picture from your online Picture Mail (see "Managing Online Picture Mail From Your Phone" on page 138).
2. Press **Options** (right softkey) to display options.
3. To select an option, highlight it and press MENU OK.

- **Copy/Move** to copy or move pictures to a selected album:
  Copy This to copy the selected picture to the album.
  Copy All to copy all pictures in the current album (or InBox) to the target album.
  Move This to move the selected picture to the album.
  Move All to move all pictures in the current album (or InBox) to the target album.
- **Save to Wallet** to copy the selected picture to the Picture Wallet. (See "Picture Wallet" on page 135.)
- **Erase** to select **Erase This** or **Erase All** to erase a single picture or all pictures saved in the current album (or InBox).
- **Edit Caption** to edit the picture's caption.
- **Picture Info** to display information on the selected picture, such as caption, time/date, size, etc.
- **Rotate Picture** to rotate the selected picture. After selecting Rotate Picture, you can rotate the selected picture by pressing ◀/▶ on the Navigation key, or **Rotate** (right softkey).
- **Create Album** to create a new album (from the InBox only). Enter the album name and press **Save** (left softkey).
- **Online Albums** to switch from pictures to the album list.
- **Thumbnail** to switch a selected picture from thumbnail to full-screen. (If the display is already in Thumbnail view, the option will appear as **Expand**.)
- **Next** to display the next 20 pictures (if applicable).
- **Previous** to display the previous 20 pictures (if applicable).

To access your online Albums options from your Phone:

1. Display the album list in the online Picture Mail menu. (See "Managing Online Picture Mail From Your Phone" on page 138.)
2. Use your Navigation key to select an album (or InBox).
3. Press **Options** (right softkey) to display options.
4. To select an option, highlight it and press MENU OK.

- **Create Album** to create a new album. Enter a new album name and press **Save** (left softkey).
- **Erase Album** to delete the selected album.
- **Rename Album** to rename the selected album. Enter a new name and press **Save** (left softkey).

Note: The InBox cannot be erased or renamed.

- **Album Info** to display information on the selected album; name, time/date and number of saved pictures.
- **Next** to display the next 20 albums (if applicable).
- **Previous** to display the previous 20 albums (if applicable).

Setting the Auto Delete Function

With this feature, pictures which have been uploaded to your online Picture Mail account will be erased automatically from your phone's Review/Share mode.

To set the Auto Delete function:

1. Press MENU OK to access the main menu.
2. Highlight **Pictures** and MENU OK.
3. Highlight **Setting** and press MENU OK.
4. Select **Yes** to activate auto delete function.

- To deactivate this feature, select **No** during step 4.

Using Service Features

Service Features: The Basics

In This Section

- Using Voicemail
- Using Caller ID
- Responding to Call Waiting
- Making a Three-Way Call
- Using Call Forwarding

Now that you've mastered your phone's fundamentals, it's time to explore the calling features that enhance your service.

Using Voicemail

Setting Up Your Voicemail

If you have a wireless voicemail service, all unanswered calls to your phone are automatically transferred to voicemail, even if your phone is in use or turned off. Therefore, you will want to set up your voicemail and personal greeting as soon as your phone is activated.

To set up voicemail:

1. Press and hold 1.
2. Follow the system prompts to create your pass code, record your greeting, record your name announcement, and choose whether to activate One-Touch Message Access (a feature that lets you press one key to access messages and bypasses the need for you to enter your pass code).

Note: The voicemail setup process may vary in certain network service areas.

Voicemail Notification

There are several ways your phone alerts you:

- By displaying a message on the screen.
- By sounding the assigned ringer type.
- By the LED blinking red.
- By displaying at the top of your screen for voicemail messages or for Messages.

New Voicemail Message Alerts

When you receive a new voice message, your phone alerts you and prompts you to call your voicemail. To call your voicemail, press TALK. To display your Voicemail menu, press MENU OK or OK (left softkey).

Important: When you are roaming off the network available to you, you may not receive notification of new voicemail messages. It is suggested that you periodically check your voicemail by dialing 1 + area code + your phone number. When your voicemail answers, press * and enter your pass code. You will be charged roaming rates when accessing voicemail while roaming off the network.

Note: Your phone accepts messages even when it is turned off. However, you are only notified of new messages when your phone is turned on and you are in a network service area.

Retrieving Your Voicemail Messages

You can review your messages directly from your phone or from any other touch-tone phone. To dial from your phone, you can either Speed Dial your voicemail or use the menu keys.

Using One-Touch Message Access:

- Press and hold 1. Follow the system prompts.

Using the Menu Keys on Your Phone to Access Your Messages:

1. Press MENU OK to access the main menu.
2. Highlight **Voicemail** and press MENU OK.
3. Highlight **Call Voicemail** and press MENU OK.

Note: You are charged for airtime minutes when you are accessing your voicemail from your phone.

Using a Phone Other Than Your SCP-8100 to Access Messages:

1. Dial your wireless phone number.
2. When your voicemail answers, press *.
3. Enter your pass code.

Clearing the Message Icon

Your phone may temporarily continue to display the message icon after you have checked your voice and text messages.

To clear the icon from the display screen:

1. Press MENU OK to access the main menu.
2. Highlight **Voicemail** and press MENU OK.
3. Highlight **Clear Count** and press MENU OK.
4. Highlight **Yes** and press MENU OK.

Using Caller ID

Caller ID lets people know who's calling by displaying the number of the person calling.

To block your phone number from being displayed for a specific outgoing call:

1. Press * 6 7.
2. Enter the number you want to call, and press MENU OK.

- To permanently block your number, call Qwest Wireless™ Repair.

Responding to Call Waiting

When you're on a call, Call Waiting alerts you to incoming calls by sounding beeps. Your phone's screen informs you that another call is coming in and displays the caller's phone number (if it is available and you are in digital mode).

To respond to an incoming call while you're on a call:

- Press TALK (or press MENU OK, highlight **Flash** and press MENU OK). This puts the first caller on hold and answers the second call.
- To switch back to the first caller, press TALK (or press MENU OK, highlight **Flash** and press MENU OK) again.

Tip: For those calls where you don't want to be interrupted, you can temporarily disable Call Waiting by pressing * 7 0 before placing your call. Call Waiting is automatically reactivated once you end the call.

Making a Three-Way Call

With Three-Way Calling, you can talk to two people at the same time. When using this feature, the normal airtime rates will be charged for each of the two calls.

1. Enter a number you wish to call and press TALK.
2. Once you have established the connection, press TALK (or press MENU OK, highlight **Three-Way Call** and press MENU OK) to put the first caller on hold.
3. Enter the second number you wish to call and press TALK (or press MENU OK, highlight **Call** and press MENU OK).
4. When you're connected to the second party, press TALK again (or press MENU OK, highlight **Flash** and press MENU OK) to begin your three-way call.

If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all three callers are disconnected.

Tip: You can also begin a Three-Way Call by displaying a phone number stored in your internal Phone Book, Call History, or Messaging. To call the third party, press MENU OK during step 3 above.

Note: Call Waiting and Three-Way Calling may not be available while roaming off the network available to you.

Using Call Forwarding

Call Forwarding lets you forward all your incoming calls to another phone number – even when your phone is turned off. You can continue to make calls from your phone when Call Forwarding is activated.

To Activate Call Forwarding

1. Press * 7 2.
2. Enter the area code and phone number to which your future calls should be forwarded.
3. Press TALK. You will hear a tone to confirm the activation of Call Forwarding.

To Deactivate Call Forwarding

1. Press * 7 1.
2. Press TALK. You will hear a tone to confirm the deactivation.

Note: Contact your Qwest Wireless™ representative for information about charges specific to Call Forwarding calls.

Sprint PCS Vision℠

In This Section

- Web
- Messaging
- Pictures
- Downloading Content
- Games
- Ringers
- Screen Savers

Sprint PCS Vision℠ brings you clarity you can see and hear with always-on, advanced multimedia services. These features, including email, pictures, and games are easy to learn and use and the rich, colorful graphic experience is visually comparable to your home or office computer. Clearly, it's a whole new way to look at wireless.

Web

With Web access on your phone, you will be able to browse full-color graphic versions – not just text versions – of your favorite Websites, making it easier than ever to stay informed while on the go. Check sports scores, trade stocks, and shop all on your phone.

Launching the Web

To launch the Web:

1. Press **Web** (left softkey).

– or –

1. Press MENU OK to access the main menu.
2. Highlight **Web** and press MENU OK.

Net Guard

When you first connect to the Internet, the Net Guard will appear to confirm that you want to connect. This feature helps you avoid accidental connections. You can disable the Net Guard in the future by selecting **Always Auto-Connect** when the Net Guard is displayed.

To change your Net Guard settings:

1. Press MENU OK to access the main menu.
2. Highlight **Settings** and press MENU OK.
3. Highlight **Vision** and press MENU OK.
4. Highlight **Net Guard** and press MENU OK.
5. Select **On** or **Off** and press MENU OK.
   - **On** to make the Net Guard appear when connecting to the Internet.
   - **Off** to avoid the Net Guard when connecting to the Internet.

Note: When enabled, the Net Guard appears only once per session. The Net Guard does not appear if the phone is merely re-connecting due to a time-out.

Your User Name

When you use Sprint PCS Vision℠ services, your User name is submitted to identify you to the network. The User name is automatically assigned to you and is used with email.

Your User name is based on your 10-digit phone number, followed by "@qwest.sprintpcs.com." For example, if your wireless phone number is 999-555-4567, your User name will be **9995554567@qwest.sprintpcs.com**.

Your User name will be automatically programmed into your phone. You don't have to enter it.

Signing In and Out of Sprint PCS Vision℠ Services

You can sign out of Sprint PCS Vision℠ services without turning off your phone; however, you will not have access to all services, including Web and messaging. While signed out, you can still place or receive phone calls, check voicemail, and use other voice services. You may sign in again at any time.

To sign out of Sprint PCS Vision services:

1. Press MENU OK to access the main menu.
2. Highlight **Settings** and press MENU OK.
3. Highlight **Vision** and press MENU OK.
4. Highlight **Disable Vision** and press MENU OK.
5. A message will appear. Press **Disable** (right softkey) to confirm that you want to sign out.

To sign in to Sprint PCS Vision services:

1. Press MENU OK to access the main menu.
2. Highlight **Settings** and press MENU OK.
3. Highlight **Vision** and press MENU OK.
4. Highlight **Enable Vision** and press MENU OK.

Browsing the Web

Browsing the Web is easy once you've learned a few basics. Here are some tips for browsing the Web with Sprint PCS Vision℠:

Softkeys

When browsing the Web, the bottom line of your phone's display contains one or more softkeys. These keys are shortcut controls for navigating around the Web, and they correspond to the softkey buttons directly below the phone's display screen. Depending on which Websites you visit, the labels on the softkeys may change to indicate their function.

To use softkeys, simply press the desired softkey button. If an additional pop-up menu appears when you press the softkey button, select the menu items using either the up or down on the Navigation key or by highlighting the option and pressing MENU OK.

Scrolling

As with other parts of your phone's menu, you'll have to scroll up and down to see everything on some Websites.

- Press the Navigation key up and down to scroll line by line or press the Volume keys on the side of the phone to scroll one page at a time.

Selecting

Once you've learned how to use softkeys, you can start navigating Websites.

- Select on-screen items by using the Navigation key to highlight the desired item, then press the desired softkey button.

You'll find that the left softkey is used primarily for selecting items. This softkey is often labeled "OK." You can also press MENU OK for selecting items.

- If the items on a page are numbered, you can use your keypad (number keys) to select an item.

Links, allow you to jump to different Web pages, select special functions, or even place phone calls.

- Select links by highlighting the link and then selecting the appropriate softkey.

Tip: The tenth item in a numbered list may be selected by pressing the 0 key on your phone's keypad, even though the number 0 doesn't appear on the screen.

Going Back

- To go back one page, press BACK on your phone. Note that BACK is also used for deleting text when you are entering text.

Going Home

- To return to the Home Page from any other Web page, highlight **Home** and press **OK** (left softkey).

Going to a Specific Website

To go to a particular Website by entering a URL (Website address):

1. Launch the Web and press the right softkey.
2. Select **Go to URL** and press the left softkey.
3. Select **Address** and press the left softkey.
4. Press the right softkey, use your keypad to enter the URL of the Website you wish to go to, and press the left softkey.
5. Press the left softkey to go to the Website.

Note: Not all Websites are viewable on your phone.

Creating a Bookmark

Bookmarks allow you to store the address of your favorite Websites for easy access at a later time.

To create a bookmark:

1. Launch the Web page you want to mark.
2. Press the right softkey to go to the Browser menu.
3. Select **Mark this page** and press the left softkey.

Note: Bookmarking a page does not store the page contents, just its address.

Note: Some pages cannot be bookmarked. Whether a particular Web page may be marked is controlled by its creator.

Accessing a Bookmark

To access a bookmark:

1. Launch the Web and press the right softkey.
2. Select **Browser Menu** and press the left softkey.
3. Select **View Bookmarks** and press the left softkey.
4. Highlight the bookmark you'd like to access and press the left softkey button or MENU OK to go to the Website.

► You may skip step 2, depending on the page you select.

Editing a Bookmark

1. Launch the Web and press the right softkey.
2. Select **View Bookmarks** and press the left softkey.
3. Select a bookmark to edit and press the right softkey.
4. Select **Edit Address** or **Edit Title**, and press the left softkey.
5. Press the right softkey, use your keypad to edit the address or title, and press the left softkey.
6. To save the bookmark, press the left softkey.

Deleting a Bookmark

1. Access the **View Bookmarks** menu as outlined above in steps 1–2.
2. Highlight the bookmark you wish to erase and press the right softkey.
3. Select **Delete** and press the left softkey.
4. Press the right softkey.

► If you want to delete all bookmarks, select **Delete All** during step 3 above.

Reloading a Web Page

1. Launch the Web.
2. To reload (refresh) the current Web page, press the right softkey.
3. Select **Browser Menu** and press the left softkey.
4. Select **Refresh this page** and press the left softkey.

► You may skip step 3, depending on the page you select.

Restarting the Web Browser

If the Web browser appears to be malfunctioning or stops responding, you can usually fix the problem by simply restarting the browser.

1. Launch the Web.
2. To restart the Web browser, press the right softkey.
3. Select **Browser Menu** and press the left softkey.
4. Select **Restart Browser** and press the left softkey.

► You may skip step 3, depending on the page you select.

Messaging

Now you can chat and receive email on your phone. When you chat, you can have a conversation without talking. Join in a Web-based chat room to exchange information on a specific topic or read conversations that others have posted – you can even launch a one-on-one chat for a more in-depth conversation.

Message Types

There are many types of Text Messaging available on your phone.

Messages

These appear on your screen as **Notifications** and include numeric messages (pages), Messages, Updates, and Mail.

New Messages

When you receive a new Message, your phone alerts you. Press **View** (left softkey) to display the message details.

- Press **Call** (left softkey) to dial the phone number.
- Press **Go** (left softkey) to go to the Website.
- Press **Cancel** (right softkey) to return to the message folder list.

Message Storage

Your phone can store up to 200 Messages. When the message memory is 90% full, a warning message prompts you to erase messages to obtain additional memory space.

Note: Unread messages will not be automatically deleted when message capacity has been reached. If your phone has 200 messages, any new text messages will be returned.

Displaying Messages

To display a Message from the message notification alert, see "New Messages" on page 158.

To display a Message from the main menu:

1. Press MENU OK to access the main menu.
2. Highlight **Messaging** and press MENU OK.
3. Highlight **Notifications** and press MENU OK (the folder list appears).
4. Highlight **Unfiled** or your defined folder and press MENU OK.
5. Highlight the header of the message you want to see and press MENU OK.

An icon appears at the left side of each message header. The icons are as follows.

New message

Urgent message

Read message

Read Urgent message

If the sender's information has already been stored in the phone book, the corresponding name or phone number appears as the header of the message. If nothing has been stored, the phone number or text that was included in the message appears as a header of the message.

To read other messages:

- Press the left Navigation key to read the previous message.
- Press the right Navigation key to read the next message.

Changing the Displaying Font Size of a Message

After you display a Message, press MENU OK to display message options.

To adjust the displaying font size:

1. Highlight **Font Size** by scrolling and press MENU OK.
2. Highlight your desired font size and press MENU OK.

Message Options

After you display a Message, press MENU OK to display message options. To select an option, highlight it and press MENU OK.

- **Call Back** to dial the phone number of the sender (if applicable).
- **Save Phone#** to save the sender's phone number, if it is not already in your internal Phone Book (if applicable). If the sender's phone number has already been stored in any Phone Book entry, **Alternate** appears instead of **Save Phone#**.
- **Prepend** to add numbers to the beginning of the phone number (if applicable). (See "Prepending a Phone Number From a Message" on page 161.)
- **Extract Info** to extract phone numbers, email or web addresses (if there are numbers or addresses contained in the text message). (See page 162.)
- **Erase** to erase the message.
- **Add Folder** to add a folder. (See "Adding a Folder for Messages" on page 165.)
- **Move Message** to move the message into the other folder. (See "Moving a Message Into the Other Folder" on page 165.)
- **Font Size** to adjust the font size depending on your preference. (See "Changing the Displaying Font Size of a Message" on page 159.)

Note: If the incoming message does not have a call back number, "Call Back", "Alternate/Save Phone#", and "Prepend" are not shown.

Prepending a Phone Number From a Message

After you display a Message, press MENU OK to display message options.

If you happen to be outside your local area code and need to add a prefix to a phone number:

1. Highlight **Prepend** and press MENU OK.
2. Enter the digits or pauses (see below) you want to add to the number. If you want to save the number, press MENU OK and select the **Save Phone#** option. If not, the changes only apply to the current call.
3. To select an option, highlight it and press MENU OK.

- **Call** to dial the phone number.
- **Save Phone#** to store the phone number in your internal Phone Book.
- **H Hard Pause** to insert a hard pause. (See "Dialing and Saving Phone Numbers With Pauses" on page 25.)
- **T 2-Sec. Pause** to insert a 2-second pause. (See "Dialing and Saving Phone Numbers With Pauses" on page 25.)

Extracting Phone Numbers From a Message

After you display a Message, press MENU OK to display message options.

To extract a phone number contained in the message:

1. Highlight **Extract Info** and press MENU OK.
2. Highlight **Phone#** and press MENU OK.
   All the phone numbers contained in the message are displayed. (If there are no phone numbers to extract from the message, the numbers are not displayed.)
3. Highlight the number you wish to extract.
4. Press MENU OK to display the options.
5. To select an option, highlight it and press MENU OK.

- **Call** to dial the phone number.
- **Save Phone#** to save the phone number, if it is not already in your internal Phone Book. If the phone number has already stored in the Phone Book entry, **Alternate** appears instead of **Save Phone#**.
- **Display Phone#** to display the phone number.
- **Prepend** to add numbers to the beginning of the phone number.

Extracting Email Addresses From a Message

To extract an email address contained in a message:

1. When the Message options are displayed, highlight **Extract Info** and press MENU OK.
2. Highlight **Email Address** and press MENU OK.
   All the email addresses contained in the message are displayed. (If there are no appropriate email addresses to extract from the message, the addresses are not displayed.)
3. Highlight the address you wish to extract.
4. Press MENU OK to display the options.
5. To select an option, highlight it and press MENU OK.

- **Display Address** to display the email address.
- **Save Address** to save the email address, if it is not already in your internal Phone Book. If the email address is already stored in the Phone Book entry, **Alternate** appears instead of **Save Address**.

Extracting URLs From a Message

To extract a site address contained in a message:

1. When the Message options are displayed, highlight **Extract Info** and press MENU OK.
2. Highlight **Web Address** and press MENU OK.
   All the Web addresses contained in the message are displayed. (If there are no appropriate Web addresses to extract from the message, the addresses are not displayed.)
3. Highlight the URL you wish to extract.
4. Press MENU OK to display the options.
5. To select an option, highlight it and press MENU OK.

- **Visit Site** to visit the Website (if applicable).
- **Display Address** to display the Web address.
- **Save Address** to save the Web address, if it is not already in your internal Phone Book. If the Web address is already stored in the Phone Book entry, **Alternate** appears instead of **Save Address**.

Creating Folders for Messages

You can create up to ten folders to store your Messages. If 10 user defined folders exist, "Create Folder" menu disappears.

1. Press MENU OK to access the main menu.
2. Highlight **Messaging** and press MENU OK.
3. Highlight **Notifications** and press MENU OK (the folder list appears).
4. From the folder list display, press **Options** (right softkey).
5. Highlight **Create Folder** and press MENU OK.
6. Enter a folder name from 3 to 13 letters and press MENU OK or **OK** (left softkey). See "Entering Text" on page 76.

► Pressing **Save** (left softkey) allows you to save the folder name.

7. If you want messages to be filed into the folder automatically, select the menu under **Auto Filing** and press MENU OK.
8. Highlight **On** and press MENU OK.
9. Select the box under **Keyword** by scrolling down and press MENU OK.
10. Enter a keyword from 3 to 14 letters and press MENU OK or **OK** (left softkey), and press **Save** (left softkey).

If you want to set optional features to the added folder:

1. From step 9 above, scroll down to select other menu options. Highlight the menu under each item and press MENU OK.
   - **Notify** to select displaying the notification to on or off, when you have a message matching the defined folder.
   - **Envelope Icon** to select displaying the envelope icon to on or off, when you have a message matching the defined folder.
2. After selecting each setting, press **Save** (left softkey).

Adding a Folder for Messages

When the message contains any word of 3 to 14 letters, you can classify the message to your defined folder. If 10 user defined folders exist, the "Add Folder" menu disappears.

1. After you display a message, press MENU OK to display message options.
2. Highlight **Add Folder** by scrolling and press MENU OK.
3. Enter a folder name from 3 to 13 letters and press MENU OK or **OK** (left softkey). See "Entering Text" on page 76.
4. If you want the message to be filed into the folder automatically, select the menu under **Auto Filing** and press MENU OK.
5. Highlight **On** and press MENU OK.
6. Select the box under **Keyword** by scrolling down and press MENU OK.
7. Enter a keyword and press MENU OK.
   – or –
   Go to **Keyword Match** and press MENU OK. Select a keyword from the Keyword Match list.
8. Press **Save** (left softkey).

If you want to set optional features to the added folder:

1. From step 7 above, scroll down to select other menu options. Highlight the menu under each item and press MENU OK.
   - **Notify** to select displaying the notification to on or off when you have a message matching the defined folder.
   - **Envelope Icon** to select displaying the envelope icon to on or off when you have a message matching the defined folder.
2. After selecting each setting, press **Save** (left softkey).

Moving a Message Into the Other Folder

After you display a message, press MENU OK to display message options. You need at least one defined folder.

If you want to move a message into the other folder:

1. Highlight **Move Message** by scrolling and press MENU OK.
2. Highlight your desired folder and press MENU OK.

Editing Folders

To edit a folder:

1. From the folder list display, highlight your desired folder except for **Unfiled**.
2. Press **Options** (right softkey).
3. Highlight **Edit Folder** and press MENU OK.
4. Select the box under your desired option to edit, and press MENU OK.
   - **Folder Name** to edit the folder name.
   - **Auto Filing** to set auto filing to on or off.
   - **Keyword** to change the folder's keyword. Incoming messages are automatically filtered into the folder if they contain the Keyword you enter.
   - **Notify** to change the notification setting to on or off.
   - **Envelope Icon** to change the icon setting to on or off.
5. Enter or select a new folder name/setting.
6. Press MENU OK or **OK** (left softkey).
7. Press **Save** (left softkey).

Erasing a Folder Including Messages

1. From the folder list display, highlight the folder you want to erase.
2. Press **Options** (right softkey).
3. Highlight **Erase Folder** and press MENU OK.
4. Highlight **Yes** and press MENU OK.

Note: The messages within the folder are also erased. If the folder contains a new message, you are prompted to select **Erase** or **Don't Erase**.

Erasing All Messages

To erase all messages:

1. From the folder list display, press **Options** (right softkey) to display the menu options.
2. Highlight **Erase All Msgs** and press MENU OK.
3. Highlight **In This Folder** or **In All Folders** and press MENU OK.
4. Highlight **Yes** and press MENU OK.

To erase all Messages already read:

1. From the folder list display, press **Options** (right softkey) to display the menu options.
2. Highlight **Erase Old Msgs** and press MENU OK.
3. Highlight **In This Folder** or **In All Folders** and press MENU OK.
4. Highlight **Yes** and press MENU OK.

Note: If the folder contains a new message, you are prompted to select **Erase** or **Don't Erase**.

Note: To erase an individual message, see "Message Options" on page 160.

Signing Up for Updates

With Updates, you can have news and information sent directly to your phone at the times you choose.

To select the information you want to send to your phone:

1. From your computer, log on to the Internet.
2. Go to the site from which you want to receive information. A few of the sites you can visit are America Online®, Yahoo!®, MSN® and eBay®. (The location where you request updates within each site will vary.)
3. Where indicated on the site, input your 10-digit wireless phone number followed by "@messaging.sprintpcs.com." For example: 999-555-4567@messaging.sprintpcs.com.

Upon completing the registration process, you should begin receiving updates on your phone as requested.

Short Mail

Using Short Mail

With Short Mail, you can use a person's wireless phone number to send instant text messages from your Sprint PCS Vision℠-enabled phone to their messaging-ready phone – and they can send messages to you. When you receive a new message, you'll automatically be notified with a one-way text message.

In addition, Short Mail includes a variety of pre-set messages, such as "I'm running late, I'm on my way," that make composing messages fast and easy. You can also customize your own pre-set messages, up to 100 characters, from your phone.

To send a Short Mail message:

1. Press MENU OK to access the main menu.
2. Select **Messaging** and press MENU OK.
3. Select **Short Mail** and press MENU OK. The browser will launch and go to the Short Mail page.
4. Select **Compose** and press left softkey.
5. Select **To**, enter the wireless phone number of the person to whom you wish to send a message (you can also scroll down to select an existing recipient), and select **Add**.

Note: You must use the right softkey to select the **NUMBER** mode input mode to enter the addressee's phone number.

6. Select **Done** (or add additional recipients and select **Done**).
7. Compose a message or use the pre-set messages or icons.
   - To type a message, highlight the **Message** box and use your keypad to type a message. Use the right softkey to select a character input mode.
   - To use a pre-set message or "emoticon," highlight **Insert** and select **Pre-set Msgs** or **Icons**. Select **Go**, then select the message or emoticon you'd like to insert and select **OK**.
8. Review your message and select **SEND** (left softkey).

To read a Short Mail message:

1. When you receive a short mail message, you will see "New" on your display screen. Press **View** (right softkey).
2. You will then see "New Short Mail. Select "Go" to read it." on your display screen. Press **Go** (left softkey). The browser will launch.
3. Scroll to the new short mail message and press left softkey. Unread short mail messages will be marked with an asterisk (*).

Note: The last four digits from the phone number of the person who sent you a short mail message appear before the message text.

To reply to a Short Mail message:

1. While the message is open, select **Reply**.
2. Compose your reply or use the pre-set messages or icons.
   - To type a reply, highlight the **Message** box and use your keypad to type a message. Use the right softkey to select a character input mode.
   - To use a pre-set message or "emoticon," highlight **Insert** and select **Pre-set Msgs** or **Icons**. Select **Go**, then select the message or emoticon you'd like to insert and select **OK**.
3. Review your reply and select **SEND** (left softkey).

To add and/or edit Pre-Set Messages:

1. Press MENU OK to access the main menu.
2. Select **Messaging** and press MENU OK.
3. Select **Short Mail** and press MENU OK.
4. Select **Setting** and press the left softkey.
5. Select **Pre-set Messages** and press the left softkey.
6. From the Pre-set Messages menu, select **(Add New)** or the message you wish to edit.
7. Enter your new message or changes and select **Save** (left softkey).

Chat

Sprint PCS Vision℠ gives you the ability to join wireless chatrooms from your phone. Send text messages and icons to chatroom participants or launch a one-on-one (private) chatroom.

To access a chatroom from the browser:

1. Press MENU OK to access the main menu.
2. Highlight **Web** and press MENU OK.
3. Select **Messaging**.
4. Select **CHAT**.
5. Select **Enter**. You will see a disclaimer for Wireless Chat. Select **I Agree** to enter the Chat menu.
6. Select a chat room from the menu (for example, "Friends" or "Singles").
7. Use your keypad to enter a nickname and select **Enter**. Once in the chatroom, you may scroll through the postings to read messages from other chatroom participants.

Note: To avoid inadvertent data usage charges, you should log out of chatrooms when you are ready to exit.

To post a message:

1. Select **Add text**.
2. Enter your message.
3. Select **Send**.

To set up a private chatroom:

1. Select **1->1**.
2. Select a chatter with whom you'd like to launch a private chatroom.

To exit a chatroom:

- Select **Leave Room**.

Pictures

Your phone gives you the ability to take pictures, view them using the phone's display, and instantly send them to your friends and family. It's as easy to use as a traditional point-and-click camera. Besides sending your pictures to friends and family, you can also send them to a Pictures Website for storage or upload them to a personal Website. Cameras can take and store images.

Taking and Viewing Pictures

1. Use your camera phone to take a picture.
2. View pictures on your phone. Select the pictures you would like to share and transfer to the Pictures Website.
3. Upload your images to your Pictures vault for future reference.

Sending Pictures to Others From Your Phone

1. Press MENU OK to access the main menu.
2. Highlight **Pictures** and press MENU OK.
3. Highlight **Online Pics** and press MENU OK. The first time you go to the site, you will need to register.
4. Select **InBox** and scroll to select the desired picture.
5. Type in the email address and add your personal message, then press MENU OK.

Accessing the Site From Your Desktop Computer

- From your computer, sign on to http://pictures.qwest.com. (You will need to register through your phone to view the Pictures Website.)

From the Website, you can share pictures, edit album titles and picture captions, organize and move images, and much more.

Picture management tools are also available to improve or customize your pictures. You'll be able to lighten, darken, crop, antique, add comic bubbles and cartoon effects, and use other features to transform your pictures.

Downloading Games, Ringers, and Screen Savers

With Sprint PCS Vision℠ and your new phone, you have access to a wide variety of downloadable ringers, screen savers, and games. The basic steps required to access and download these files is outlined below.

Accessing the Download Menus

To access the Sprint PCS Vision℠ download menus:

1. Press MENU OK to access the main menu.
2. Highlight **Downloads** and press MENU OK.
3. Highlight the type of file you wish to download (**Games**, **Ringers**, or **Screen Savers**) and press MENU OK.
4. Highlight **Get New** and press MENU OK. The browser will launch and take you to the corresponding download menu.

To access the Sprint PCS Vision℠ download menus from the Web browser:

- From the home page, select **Games**, **Ringers**, **Screen Savers**, or **Applications** to go to the corresponding download menu. (For more information on navigating the Web, see "Browsing the Web" on page 154.)

Searching for Content

You may search for an item by selecting the (search) icon and using the keypad to enter your search criteria (for example, enter "Mi" to find Michigan). (The search icon appears under the menus for Games, Ringers, Screen Savers, and Applications.)

Downloading an Item

Once you've decided on an item to download, highlight it and press MENU OK or OK (left softkey). You will see a summary page for the item including its title, the vendor, the download detail, the file size, and the cost. Links allow you to view the **License Details** page, which outlines the price, license type, and length of license for the download, and the **Terms of Use** page, which details the Premium Services Terms of Use and your responsibility for payment.

To download a selected item:

1. From the information page, select **Buy**. (The item will automatically download to your phone. You will see a series of screens detailing the download initiation, progress [in bytes], and saving process. When the **New Download** screen appears, the item has been successfully downloaded to **My Content Manager**.)

   (If you have not previously purchased an item, you will be prompted to enter your account password and create your purchasing profile.)
2. Select your next action/option once the download is complete:
   - Press Use (left softkey) to assign the downloaded item (or to play, in the case of a game).
   - Press Shop (right softkey) to browse for other items to download.
   - Press END/⏻ to quit the browser and return to standby mode.

Note: My Content Manager is accessible from the Sprint PCS Vision home page under the **Downloads** menu.

Games

You can play a variety of entertaining and graphically-rich games on your phone. New games are easy to download and play.

Tip: For complete instructions on downloading, see "Downloading Games, Ringers, and Screen Savers" on page 172.

Downloading Games

1. Press MENU OK to access the main menu.
2. Highlight **Downloads** and press MENU OK.
3. Highlight **Games** and press MENU OK.
4. Highlight **Get New** and press MENU OK. The browser will launch and take you to the Games download menu.
5. Use your Navigation key to highlight and select a game you wish to download. (For more information on navigating the Web, see "Browsing the Web" on page 154.)
6. From the information page, select **Buy**. (The game will automatically download to your phone. You will see a series of screens detailing the download initiation, progress [in bytes], and saving process. When the **New Download** screen appears, the game has been successfully downloaded to **My Content Manager**.)

   (If you have not previously purchased an item, you will be prompted to enter your account password and create your purchasing profile.)
7. Select your next action/option once the download is complete:
   - Press **Use** (left softkey) to play the downloaded game.
   - Press **Shop** (right softkey) to browse for other items to download.
   - Press END/⏻ to quit the browser and return to standby mode.

Playing Games

To play a downloaded game on your phone:

1. Press MENU OK to access the main menu.
2. Highlight **Downloads** and press MENU OK.
3. Highlight **Games** and press MENU OK.
4. Select the game you wish to play.
5. If applicable, a prompt will display the days remaining on the game license and ask if you want to continue. Select **Yes**.
6. Follow the onscreen instructions to play the game. When you are finished, select **Exit** (or **Quit**) or press END/⏻.
7. A prompt will display: "Resume the Application?" Select **Yes** to continue playing or **No** to exit.

Ringers

Tip: For complete instructions on downloading, see "Downloading Games, Ringers, and Screen Savers" on page 172.

Downloading Ringers

To download an available ringer to your phone:

1. Press MENU OK to access the main menu.
2. Highlight **Downloads** and press MENU OK.
3. Highlight **Ringers** and press MENU OK.
4. Highlight **Get New** and press MENU OK. The browser will launch and take you to the Ringers download menu.
5. Use your Navigation key to highlight and select a ringer you wish to download. (For more information on navigating the Web, see "Browsing the Web" on page 154.)
6. From the information page, select **Buy**. (The ringer will automatically download to your phone. You will see a series of screens detailing the download initiation, progress [in bytes], and saving process. When the **New Download** screen appears, the ringer has been successfully downloaded to **My Content Manager**.)

   (If you have not previously purchased an item, you will be prompted to enter your account password and create your purchasing profile.)
7. Select your next action/option once the download is complete:
   - Press **Use** (left softkey) to assign the downloaded ringer.
   - Press **Shop** (right softkey) to browse for other items to download.
   - Press END/O to quit the browser and return to standby mode.

Note: You may store total of 512KB downloaded data on your phone. Additional downloads will be stored in **My Content Manager**.

Assigning Downloaded Ringers

Downloaded ringers may be assigned directly from the Downloads menu and are also available through the Settings menu.

To assign a downloaded ringer through the Settings menu, see "Selecting Ringer Types for Voice Calls" on page 30, "Selecting Ringer Types for Voicemail" on page 31, "Selecting Ringer Types for Messages" on page 31, "Selecting Ringer Types for Calendar" on page 32, "Setting a Start-up/Power-off Tone" on page 33 or "Selecting a Ringer/Image Type for an Entry" on page 86.

To assign a downloaded ringer from the Downloads menu:

1. Press MENU OK to access the main menu.
2. Highlight **Downloads** and press MENU OK.
3. Highlight **Ringers** and press MENU OK.
4. Highlight the downloaded data you want to confirm and press MENU OK.
5. Select **Assign** from the options and press MENU OK.
6. Highlight **Voice Calls**, **Voicemail**, **Messaging**, **Calendar**, **Start-up Tone**, **Power-off Tone**, or **Phone Book**, and press MENU OK. The following two items require an extra step:
   - **Voice Calls:** highlight **With Caller ID** or **No Caller ID**, and press MENU OK.
   - **Phone Book:** highlight your desired entry and press MENU OK.
7. A message appears confirming the data has been assigned.

Note: You may assign a ringer to more than one type of call.

Purchasing Ringers

You can purchase ringers directly from your phone by following the instructions on page 172.

Note: My Content Manager stores items for up to 90 days, during which you may download it as often as you like. Once an item has been downloaded to your phone, you may keep the file for as long as you like.

Screen Savers

Tip: For complete instructions on downloading, see "Downloading Games, Ringers, and Screen Savers" on page 172.

Downloading Screen Savers (Images)

To download an available Screen Saver (Image) to your phone:

1. Press MENU OK to access the main menu.
2. Highlight **Downloads** and press MENU OK.
3. Highlight **Screen Savers** and press MENU OK.
4. Highlight **Get New** and press MENU OK. The browser will launch and take you to the Screen Savers download menu.
5. Use your Navigation key to highlight and select a Screen Saver you wish to download. (For more information on navigating the Web, see "Browsing the Web" on page 154.)
6. From the information page, select **Buy**. (The screen saver will automatically download to your phone. You will see a series of screens detailing the download initiation, progress [in bytes], and saving process. When the **New Download** screen appears, the screen saver has been successfully downloaded to **My Content Manager**.)

   (If you have not previously purchased an item, you will be prompted to enter your account password and create your purchasing profile.)
2. Select your next action/option once the download is complete:
   - Press **Use** (left softkey) to assign the downloaded item.
   - Press **Shop** (right softkey) to browse for other items.
   - Press END/⏻ to quit the browser and return to standby mode.

Note: You may store total of 512KB downloaded data on your phone, depending on the file sizes. Additional downloads will be stored in **My Content Manager**.

Assigning Downloaded Screen Savers (Images)

Downloaded Screen Savers may be assigned directly from the Downloads menu and are also available through the Settings menu.

To assign a downloaded Screen Saver through the Settings menu, see "Changing the Display Screen" on page 39, "Changing the Display for Incoming Calls" on page 40, "Changing the Screen Saver" on page 42 or "Selecting a Ringer/Image Type for an Entry" on page 86.

To assign a downloaded Screen Saver from the Downloads menu:

1. Press MENU OK to access the main menu.
2. Highlight **Downloads** and press MENU OK.
3. Highlight **Screen Savers** and press MENU OK.
4. Highlight the downloaded data you want to confirm and press MENU OK.
5. Select **Assign** from the options and press MENU OK.
6. Highlight one of **Incoming Calls**, **Screen Saver** or **Phone Book**, **Standby**, **Outgoing Calls**, or **Service Search**, and press MENU OK. The following item needs an extra step:
   - **Phone Book:** highlight your desired entry and press MENU OK.
7. A message appears confirming the data has been assigned.

Note: Depending on the data, you can select where to assign the data:
Image data: **Incoming Calls**, **Screen Saver**, or **Phone Book**.
Animation data: **Standby**, **Outgoing Calls**, or **Service Search**.

Note: You may assign a Screen Saver to more than one task.

Purchasing Screen Savers

You can purchase Screen Savers directly from your phone by following the instructions on page 172.

Note: My Content Manager stores items for up to 90 days, during which you may download it as often as you like. Once an item has been downloaded to your phone, you may keep the file for as long as you like.

Sprint PCS Vision℠ FAQs

How will I know when my phone is ready for Sprint PCS Vision℠ service?

Your User name (for example, 9995554567@qwest.sprintpcs.com, if your phone number were 999-555-4567), will display on your phone's display screen.

How do I know when my phone is connected to Sprint PCS Vision℠ services?

Your phone automatically connects when Sprint PCS Vision℠ service is used or an incoming message arrives. Your phone will also display the icon. (Connecting takes about 10-12 seconds.)

Can I make calls and use Sprint PCS Vision℠ services at the same time?

You cannot use voice and Sprint PCS Vision℠ services simultaneously. If you receive a call while Sprint PCS Vision℠ service is active, the call will be forwarded to voicemail.

When is my data connection active?

Your connection is active when data is being transferred. Incoming calls go directly to voicemail. When active, the (Sending) or (Receiving) indicator flashes on your phone's display screen.

When is my data connection dormant?

If no data is received for 10 seconds, the connection goes dormant. When the connection is dormant, voice calls are allowed. (The connection may become active again quickly.) If no data is received for an extended period of time, the connection will terminate.

Can I sign out of data services?

You can sign out without turning off your phone, however you will not be able to browse the Web or use other Sprint PCS Vision℠ services. While signed out, you can still place or receive phone calls, check voicemail, and use other voice services. You may sign in again at any time. To sign out, go to **Settings** > **Vision** > **Disable Vision** in your phone's menu.

Safety Guidelines

Safety

In This Section

- Getting the Most Out of Your Reception
- Maintaining Safe Use of and Access to Your Phone
- Caring for the Battery
- Acknowledging Special Precautions and the FCC Notice

Part of getting the most out of your phone is learning how the phone works and how to care for it. This section outlines performance and safety guidelines that help you understand the basic features of your phone's operation.

Getting the Most Out of Your Reception

Keeping Tabs on Signal Strength

The quality of each call you make or receive depends on the signal strength in your area. Your phone informs you of the current signal strength by displaying a number of bars next to the signal strength icon. The more bars displayed, the stronger the signal. If you're inside a building, being near a window may give you better reception.

Understanding the Power Save Feature

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. If your phone is active, it periodically rechecks service availability or you can check it yourself by pressing any key. Anytime the Power Save feature is activated, a message displays on the screen. When a signal is found, your phone returns to standby mode.

Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radiofrequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.01µ watts to 0.2 watts in digital mode.

Knowing Radiofrequency Safety

The design of your phone complies with updated NCRP standards described below.

In 1991-92, the Institute of Electrical and Electronics Engineers (IEEE) and the American National Standards Institute (ANSI) joined in updating ANSI's 1982 standard for safety levels with respect to human exposure to RF signals. More than 120 scientists, engineers and physicians from universities, government health agencies and industries developed this updated standard after reviewing the available body of research. In 1993, the Federal Communications Commission (FCC) adopted this updated standard in a regulation. In August 1996, the FCC adopted a hybrid standard consisting of the existing ANSI/IEEE standard and the guidelines published by the National Council of Radiation Protection and Measurements (NCRP).

Maintaining Your Phone's Peak Performance

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- Hold the phone with the antenna raised, fully-extended, and over your shoulder.
- Try not to hold, bend, or twist the phone's antenna.
- Don't use the phone if the antenna is damaged.
- Speak directly into the mouthpiece.
- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery.

Note: For the best care of your phone, only authorized personnel should service your phone and accessories. Faulty service may void the warranty.

Maintaining Safe Use of and Access to Your Phone

FAILURE TO FOLLOW THE INSTRUCTIONS OUTLINED MAY LEAD TO SERIOUS PERSONAL INJURY AND POSSIBLE PROPERTY DAMAGE

Using Your Phone While Driving

Talking on your phone while driving (or operating the phone without a hands-free device) is prohibited in some jurisdictions. Laws vary as to specific restrictions. Remember that safety always comes first.

When using your phone in the car:

- Get to know your phone and its features, such as speed dial and redial.
- When available, use a hands-free device.
- Position your phone within easy reach.
- Let the person you are speaking to know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.
- Do not take notes or look up phone numbers while driving.
- Dial sensibly and assess the traffic; if possible, place calls when stationary or before pulling into traffic.

- Do not engage in stressful or emotional conversations that may divert your attention from the road.
- Dial 9 1 1 TALK to report serious emergencies. It's free from your wireless phone.
- Use your phone to help others in emergencies.
- Call roadside assistance or a special non-emergency wireless number when necessary.

Following Safety Guidelines

To operate your phone safely and efficiently, always follow any special regulations in a given area. Turn your phone off in areas where use is forbidden or when it may cause interference or danger.

Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radiofrequency (RF) signals. However, RF signals from wireless phones may affect inadequately shielded electronic equipment.

RF signals may affect improperly installed or inadequately shielded electronic operating systems and/or entertainment systems in motor vehicles. Check with the manufacturer or their representative to determine if these systems are adequately shielded from external RF signals. Also check with the manufacturer regarding any equipment that has been added to your vehicle.

Consult the manufacturer of any personal medical devices, such as pacemakers and hearing aids, to determine if they are adequately shielded from external RF signals.

Note: Always turn off the phone in health care facilities and request permission before using the phone near medical equipment.

Turning Off Your Phone Before Flying

Turn off your phone before boarding any aircraft. To prevent possible interference with aircraft systems, the U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent any risk of interference, FCC regulations prohibit using your phone while the plane is in the air.

Turning Off Your Phone in Dangerous Areas

To avoid interfering with blasting operations, turn off your phone when in a blasting area or in other areas with signs indicating that two-way radios should be turned off. Construction crews often use remote-control RF devices to set off explosives.

Turn off your phone when you're in any area that has a potentially explosive atmosphere. Although it's rare, your phone or its accessories could generate sparks. Sparks could cause an explosion or a fire resulting in bodily injury or even death. These areas are often, but not always, clearly marked. They include:

- Fueling areas such as gas stations.
- Below deck on boats.
- Fuel or chemical transfer or storage facilities.
- Areas where the air contains chemicals or particles such as grain, dust or metal powders.
- Any other area where you would normally be advised to turn off your vehicle's engine.

Note: Never transport or store flammable gas, liquid, or explosives in the compartment of your vehicle that contains your phone or accessories.

Restricting Children's Access to your Phone

Your phone is not a toy. Children should not be allowed to play with it because they could hurt themselves and others, damage the phone or make calls that increase your phone bill.

Caring for the Battery

Protecting Your Battery

The guidelines listed below help you get the most out of your battery's performance.

- Use only authorized batteries and desktop chargers. These chargers are designed to maximize battery life. Using other batteries or chargers voids your warranty and may cause damage.
- In order to avoid damage, charge the battery only in temperatures that range from 32° F to 113° F (0° C to 45° C).
- Don't use the battery charger in direct sunlight or in high humidity areas, such as the bathroom.
- Never dispose of the battery by incineration.
- Keep the metal contacts on top of the battery clean.
- Don't attempt to disassemble or short-circuit the battery.
- The battery may need recharging if it has not been used for a long period of time.
- It's best to replace the battery when it no longer provides acceptable performance. It can be recharged hundreds of times before it needs replacing.
- Don't store the battery in high temperature areas for long periods of time. It's best to follow these storage rules:

  Less than one month:
  4° F to 140° F (-20° C to 60° C)

  More than one month:
  4° F to 113° F (-20° C to 45° C)

Disposal of Lithium Ion (LiIon) Batteries

Be sure to dispose of your battery properly. In some areas, the disposal of batteries in household or business trash may be prohibited.

Note: For safety, do not handle a damaged or leaking LiIon battery.

Acknowledging Special Precautions and the FCC Notice

FCC Notice

The phone may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the phone if such interference cannot be eliminated.

Vehicles using liquefied petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association, One Batterymarch Park, Quincy, MA 02269, Attn: Publication Sales Division.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Cautions

Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment, and void your authority to operate this equipment. Only use approved batteries, antennas and chargers. The use of any unauthorized accessories may be dangerous and void the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.

Body-Worn Operation

To maintain compliance with FCC RF exposure requirements, Body-worn operations are restricted to belt-clips, holsters or similar accessories that have no metallic component in the assembly and that provide at least 0.7 inch (1.8 cm) separation between the device, including its antenna whether extended or retracted, and the user's body. Use of non-authorized accessories may violate FCC RF exposure requirements.

For more information about RF exposure, please visit the FCC Website at www.fcc.gov.

Specific Absorption Rates (SAR) for Wireless Phones

The SAR is a value that corresponds to the relative amount of RF energy absorbed in the head of a user of a wireless handset.

The SAR value of a phone is the result of an extensive testing, measuring and calculation process. It does not represent how much RF the phone emits. All phone models are tested at their highest value in strict laboratory settings. But when in operation, the SAR of a phone can be substantially less than the level reported to the FCC. This is because of a variety of factors including its proximity to a base station antenna, phone design and other factors. What is important to remember is that each phone meets strict federal guidelines. Variations in SARs do not represent a variation in safety.

All phones must meet the federal standard, which incorporates a substantial margin of safety. As stated above, variations in SAR values between different model phones do not mean variations in safety. SAR values at or below the federal standard of 1.6 W/kg are considered safe for use by the public.

The highest reported SAR values of the SCP-8100 are:

AMPS mode (Part 22) - Head: 1.42W/kg; Body-worn: 0.79W/kg
CDMA mode (Part 22) - Head: 1.37W/kg; Body-worn: 0.76W/kg
PCS CDMA mode (Part 24) - Head: 1.34W/kg; Body-worn: 1.33W/kg

FCC Radiofrequency Emission

This phone meets the FCC Radiofrequency Emission Guidelines. FCC ID number: AEZSCP-81H. More information on the phone's SAR can be found from the following FCC Website: http://www.fcc.gov/oet/fccid.

Owner's Record

The model number, regulatory number and serial number are located on a nameplate inside the battery compartment. Record the serial number in the space provided below. This will be helpful if you need to contact us about your phone in the future.

Model: Sprint PCS Vision℠-enabled Phone SCP-8100

Serial No.:

User's Guide Proprietary Notice

CDMA Technology is licensed by QUALCOMM Incorporated under one or more of the following patents:

4,901,307 5,109,390 5,267,262 5,416,797

5,506,865 5,544,196 5,657,420 5,101,501

5,267,261 5,414,796 5,504,773 5,535,239

5,600,754 5,778,338 5,228,054 5,337,338

5,710,784 5,056,109 5,568,483 5,659,569

5,490,165 5,511,073

T9 Text Input is licensed by Tegic Communications and is covered by U.S. Pat. 5,818,437, U.S. Pat. 5,953,541, U.S. Pat. 6,011,554 and other patents pending.

Index

A
Airplane Mode 45
Answering Calls 18

B
Backlight 38
Battery
  Capacity 14
  Charging 16
  Disposal 188
  Installing 15
  Removing 15

C
Call Guard 63
Call History
  Erasing 73
  Making a Call From 71
  Options 70
  Saving a Phone Number From 71
  Viewing 70
Chat 170

D
Dialing Options 21
Display Screen Symbols 12
Display Settings 37-43

E
Entering Text
  Alphabet Mode 78
  Selecting a Character Input Mode 76
  Symbols and Numbers 79
  T9 Text Input 77

F
FCC Notice 189

G
Greeting 37

I
Internal Phone Book
  Adding an Entry 81
  Finding Entries 82
  Options 76
  Secret Entries 87

L
Location Settings 44
Locking Your Phone 54

M
Making Calls 17
Menus
  Diagram 67
  Navigation 66
  Structure 66
  Viewing 67
Missed Call Notification 20

N
Net Guard 152

P
Phone Number
  Displaying 17

R
Ringer Types 30
Roaming 60

S
Security Menu 54
Services
  Call Forwarding 150
  Call Waiting 148
  Caller ID 148
  Directory Assistance 5
  Operator Services 5
Short Mail 168
Special Numbers 57
Sprint PCS Vision
  Downloading Items 172
  FAQs 180
  Games 174
  Messaging 158

Ringers 176
Screen Savers 178

T

T9 Text Input 77
Three-Way Calling 149
TTY Use 46

U

Unlocking Your Phone 55
Updates 167

V

Voicemail
Notification 146
Retrieving 147
Setting Up 5, 146
Volume Settings 34

W

Web 152
Browsing 154
Launching 152